C1051

12A581

K4
Fuel pump relay

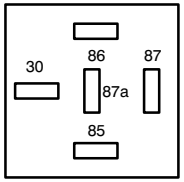

F05051

Pin	Circuit	Circuit function
86	361 (RD)	Voltage supplied in Start and Run (overload protected)
87	238 (DG/YE)	Fuel pump relay, switched power, output
30	1059 (LB/OG)	Voltage supplied at all times (overload protected)
87a	–	not used
85	926 (LB/OG)	Fuel pump relay, control

C1064

12B637

B10
Engine Coolant Temperature (ECT) sensor (12A648)

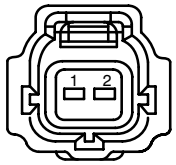

F02091

Pin	Circuit	Circuit function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
2	359 (GY/RD)	signal, return

C1066

12B637

Y133
Idle air control valve (IAC) (9F715)

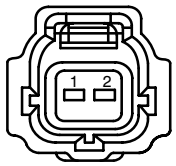

F02091

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle air control valve (IAC) (9F715), control

C1068 (GY)

12B637

B257
Differential pressure feedback EGR (DPFE) sensor (9J460)

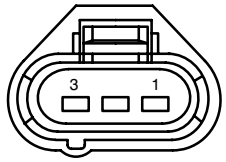

F03071

Pin	Circuit	Circuit function
1	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
2	359 (GY/RD)	signal, return
3	351 (BN/WH)	Reference, voltage

C1072

12B637

Y205
EGR vacuum regulator solenoid (9J459)

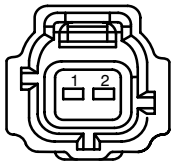

F02101

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	360 (BN/PK)	EGR Vacuum Regulator (EVR), control

C1078 (GY)

12A581

N126
A/C high pressure switch (19D594)

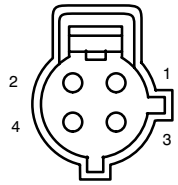

F04195

Pin	Circuit	Circuit function
1	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
2	–	not used
3	348 (VT)	A/C demand signal
4	–	not used