C2041a (BK/RD)

14401

Restraints control module (14B321)

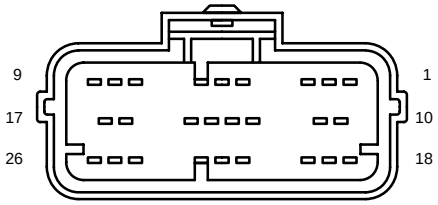

F26008

Pin	Circuit	Circuit function
1	–	not used
2	296 (WH/VT)	Voltage supplied in Start and Run (overload protected)
3	614 (GY/OG)	Driver air bag, feed, monitor
4	615 (GY/WH)	Driver air bag, return
5	70 (LB/WH)	ISO Bus
6	607 (LB/OG)	Passenger air bag, feed, monitor
7	616 (PK/BK)	Passenger air bag, return
8	–	not used
9	–	not used
10	57 (BK)	Ground
11	–	not used
12	–	not used
13	57 (BK)	Ground
14	601 (LB/PK)	Voltage supplied in Start and Run (overload protected)
15	1081 (YE/RD)	Seat belt tensioner, passenger seat, feed
16	1082 (YE/BK)	Seat belt tensioner, passenger seat, return
17	–	not used
18	1079 (LG/RD)	Seat belt tensioner, driver seat, feed
19	–	not used
20	608 (BK/YE)	Air bag indicator, control
21	57 (BK)	Ground
22	1080 (LG/BK)	Seat belt tensioner, driver seat, return
23	–	not used
24	–	not used
25	–	not used
26	1083 (LB/BK)	Air bag, tone driver

C2041b (BK/BU/RD)

14405

Restraints control module (14B321)

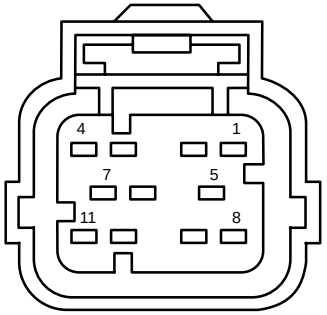

F10107

Pin	Circuit	Circuit function
1	–	not used
2	1257 (WH/LB)	Air bag – driver side impact – to module – feed
3	1258 (RD)	Air bag – driver side impact – to module – return
4	–	not used
5	1259 (WH/YE)	Air bag – passenger side impact – to module – feed
6	1260 (BN/YE)	Air bag – passenger side impact – to module – return
7	–	not used
8	1261 (WH/LG)	Air bag – driver side impact – crash sensor to module – feed
9	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
10	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed
11	1264 (BN)	Air bag – passenger side impact – crash sensor to module – return