* Cobra

C1262 (BK)

12A581

Constant Control Relay Module (CCRM)

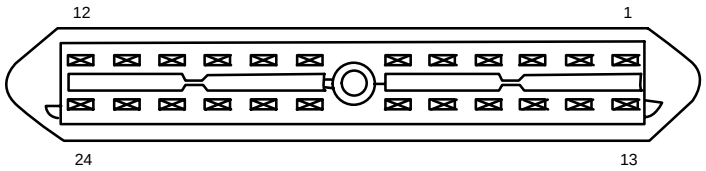

Pin	Circuit	Circuit function
1	229 (RD/OG)	Low speed fan control relay, output
2	229 (RD/OG)	Low speed fan control relay, output
3	554 (YE/BK)	Voltage supplied at all times (overload protected)
4	554 (YE/BK)	Voltage supplied at all times (overload protected)
5	238 (DG/YE)	Fuel pump relay, switched power, output
6	638 (OG/LB)	High speed fan control relay, output
7	638 (OG/LB)	High speed fan control relay, output
8	38 (BK/OG)	Voltage supplied at all times (overload protected)
9	–	not used
10	38 (BK/OG)	Voltage supplied at all times (overload protected)
11	1059 (LB/OG)	Voltage supplied at all times (overload protected)
12	361 (RD)	Voltage supplied in Start and Run (overload protected)
13	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)
14	228 (DB)	Low speed fan control relay, control
15	570 (BK/WH)	Ground
16	1205 (BK)	Ground
17	639 (LG/VT)	High speed fan control relay, control
18	1205 (BK)	Ground
	*866 (WH)	Fuel pump relay, control
19	–	not used
20	–	not used
21	198 (DG/OG)	Voltage supplied at all times (overload protected)
22	331 (PK/YE)	A/C clutch relay, control
23	347 (BK/YE)	A/C clutch relay, switched output
24	1118 (RD)	PCM power relay, output

C1292 (BK)

12B637

Supercharger bypass solenoid

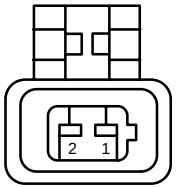

F02117

Pin	Circuit	Circuit function
1	965 (LG/VT)	Supercharger bypass solenoid, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1299 (BK)

12B637

Barometric Absolute Pressure (BAP) sensor

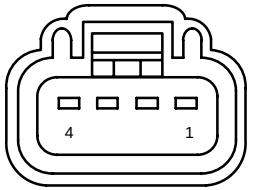

F04221

Pin	Circuit	Circuit function
1	356 (DB/LG)	Barometric Absolute Pressure (BAP) sensor, signal
2	351 (BN/WH)	Reference, voltage
3	1291 (RD/YE)	Intake Air Temperature (IAT) sensor 2, signal
4	359 (GY/RD)	signal, return

C1312 (BK)

12B637

Fuel injector 7 (9F593)

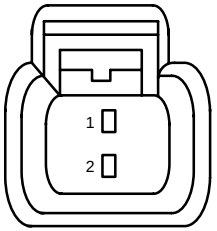

F02054

Pin	Circuit	Circuit function
1	561 (TN/RD)	Fuel injector 7, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)