C220a

14401

A30
Instrument cluster

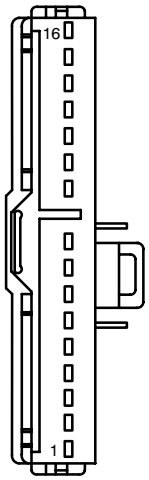

F16022

Pin	Circuit	Circuit Function
1	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
2	784 (LB/BK)	Four–wheel drive, indicator, Low
3	783 (GY)	Four–wheel drive, indicator, High
4	203 (OG/LB)	Cruise set, indicator, control
5	484 (OG/BK)	Headlamp switch, on input
6	343 (DB/LG)	Anti–theft, indicator, input
7	57 (BK)	Instrument illumination, input
8	235 (RD/BK)	Front seats (power), input
9	–	not used
10	2 (WH/LB)	Turn lamps, feed, right front
11	627 (BK/OG)	Door ajar indicator, control
12	253 (DG/WH)	Oil pressure switch, input
13	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
14	–	not used
15	11 (TN/YE)	Tachometer
16	–	not used

C220b

14401

A30
Instrument cluster

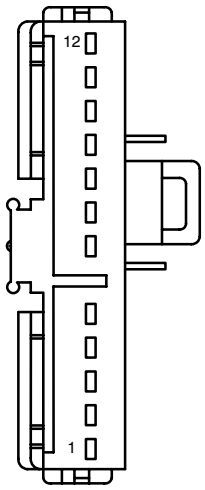

F12020

Pin	Circuit	Circuit Function
1	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
2	570 (BK/WH)	Ground
3	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
4	235 (RD/BK)	Instrument illumination, input
5	3 (LG/WH)	Turn lamps, feed, left front
6	12 (LG/BK)	Power, Hot with High Beams on
7	57 (BK)	Ground
8	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
9	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
10	921 (GY/OG)	Inertia Fuel Shutoff (IFS) switch, Ground, input
	1017 (BK/WH)	Check cap indicator lamp
11	–	not used
12	29 (YE/WH)	Fuel pump/fuel gauge sender