-1

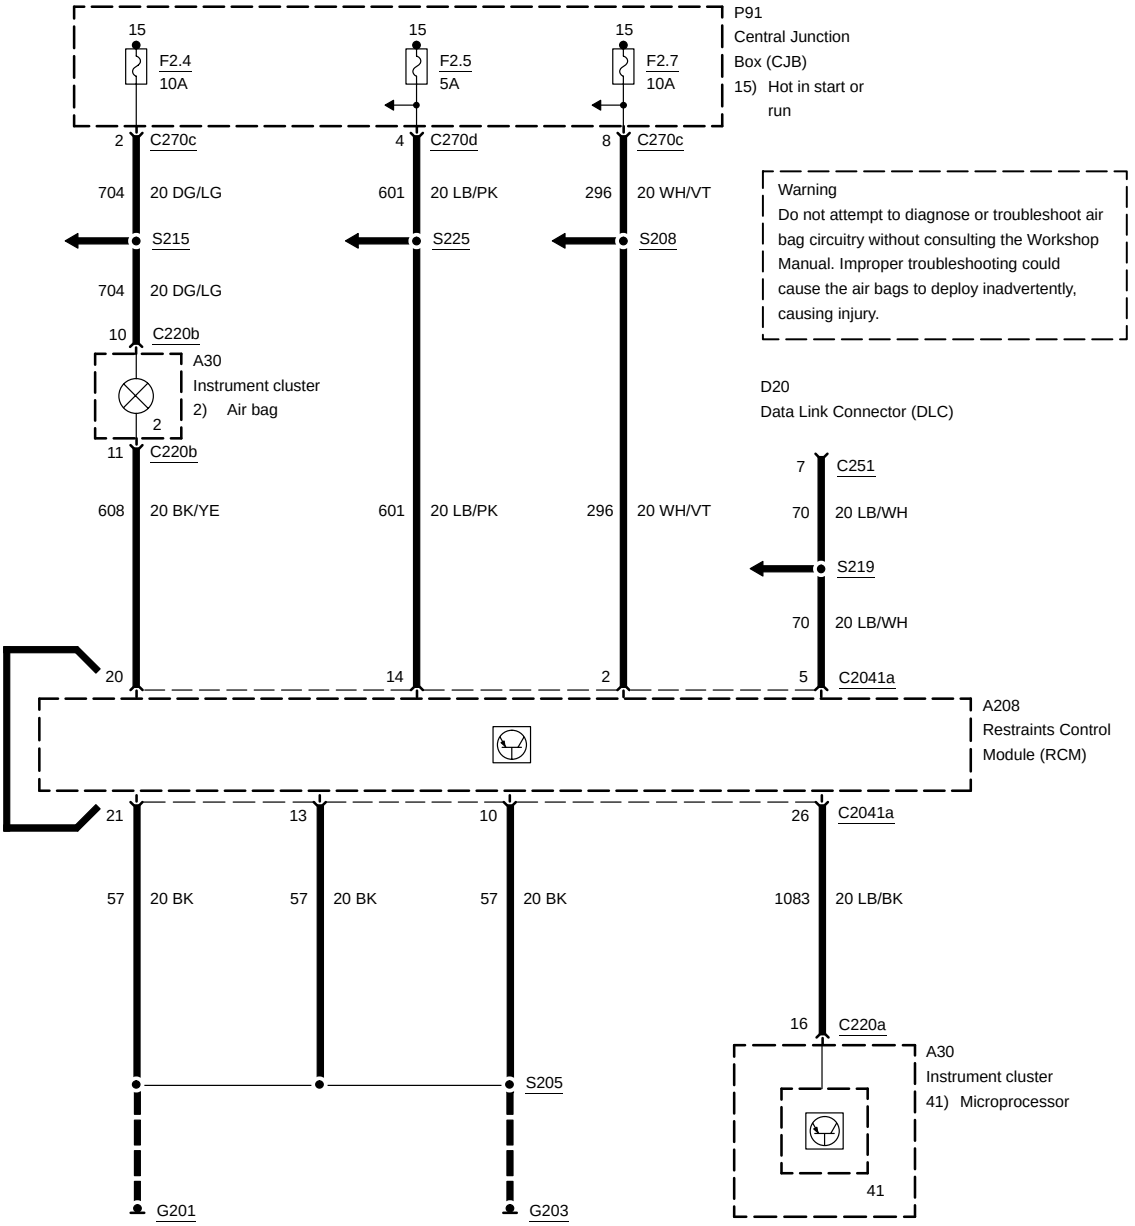
15
F2.4
10A
15
F2.5
5A
15
F2.7
10A
P91
Central Junction
Box (CJB)
15) Hot in start or
run
2 C270c
4 C270d
8 C270c
704 20 DG/LG
601 20 LB/PK
296 20 WH/VT
S215
S225
S208
704 20 DG/LG
10 C220b
A30
Instrument cluster
2) Air bag
2
11 C220b
608 20 BK/YE
601 20 LB/PK
296 20 WH/VT
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
D20
Data Link Connector (DLC)
7 C251
70 20 LB/WH
S219
70 20 LB/WH
20
14
2
5 C2041a
A208
Restraints Control
Module (RCM)
21
13
10
26 C2041a
57 20 BK
57 20 BK
57 20 BK
1083 20 LB/BK
16 C220a
S205
A30
Instrument cluster
41) Microprocessor
41
G201
G203