C2123

14K733

E45
Side turn signal lamp, left

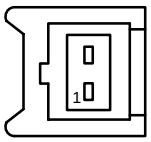

F02012

Pin	Circuit	Circuit Function
1	31-LG13 (BK)	Ground
2	49-LG13 (BU/RD)	Pulsed power feed (overload protected)

C2124

14K733

E44
Side turn signal lamp, right

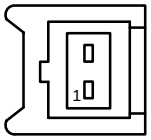

F02012

Pin	Circuit	Circuit Function
1	31-LG20 (BK)	Ground
2	49-LG20 (BU/WH)	Pulsed power feed (overload protected)

C2125 (GN)

14A584

N310
Window operating switch, driver side for passenger side

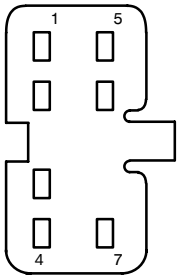

F07016

Pin	Circuit	Circuit Function
1	32-AJ18 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	15-AJ9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
3	31-AJ9 (BK)	Ground
4	–	not used
5	–	not used
6	–	not used
7	33-AJ18 (YE/VT)	Switched between: Battery voltage, Ground or Open

C2126

19K315

M40
Front seat backrest motor

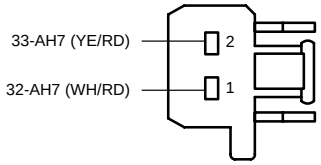

F02053

C2127

19K315

M41
Front seat lumbar compressor motor

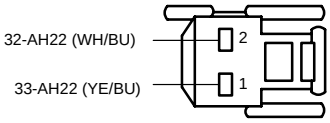

F02047

C2128

19K315

M42
Front seat forward/ rearward motor

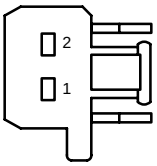

F02053

Pin	Circuit	Circuit Function
1	33-AH9 (YE/GN)	Switched between: Battery voltage, Ground or Open
2	32-AH9 (WH/GN)	Switched between: Battery voltage, Ground or Open

C2129

19K315

M45
Front seat height motor

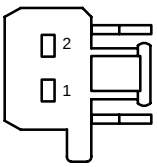

F02053

Pin	Circuit	Circuit Function
1	33-AH10 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open