C350 (WH)

14N104

A200
Lighting control module

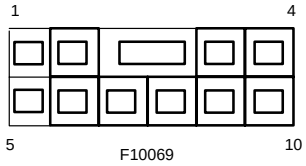

F10069

Pin	Circuit	Circuit function
1	LA12 (RD/YE)	Voltage supplied at all times (overload protected)
2	SC23 (PK/WH)	Smart Entry Control (SEC)/Timer module, to Lighting control module
3	LA14 (YE)	Headlamps, Switched, Ground
4	LA21 (BN)	Headlamp flasher, switch sense
5	LA16 (OG)	Low beam lamp, left front
6	LA18 (OG/BU)	High beam lamp, left front
7	LA11 (RD/BU)	Voltage supplied at all times (overload protected)
8	LA15 (RD/WH)	Low beam lamp, right front
9	LA23 (LG/RD)	High beam lamp, switch sense
10	LA17 (OG/WH)	High beam lamp, right front

C351 (BN)

14A333

Y19
Speaker, right rear (18808)



F02129

Pin	Circuit	Circuit function
1	RB16 (BU)	Speaker, right rear (18808)
2	RB22 (BU/BK)	Speaker, right rear (18808)

C352

14N104

Y17
Speaker, left rear (18808)



F02263

Pin	Circuit	Circuit function
1	RA54 (BU/WH)	Speaker, left rear (18808)
	RB11 (GN)	Speaker, left rear (18808)
2	RA55 (BU/YE)	Speaker, left rear (18808)
	RB12 (BU/YE)	Speaker, left rear (18808)

C353 (WH)

14N104

A14
Subwoofer amplifier (18C804)

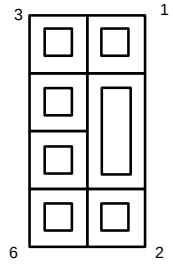

F06195

Pin	Circuit	Circuit function
1	RB26 (OG)	Voltage in Run or Accessory (overload protected)
2	RB52 (WH)	Radio (18806), to Subwoofer
3	RBE3 (BK)	Ground
4	RB98	Shield
5	RB55 (OG)	Radio (18806), to Subwoofer
6	RB53 (BU)	Radio (18806), to Subwoofer