C286 (BK)

14401

Sunload sensor
(19E663)

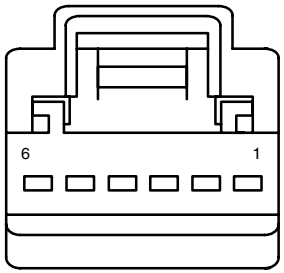

F06128

Pin	Circuit	Circuit function
1	468 (BN)	Sunload sensor (19E663), signal – driver side
2	218 (WH/VT)	Autolamp sensor, signal
3	729 (RD/WH)	Voltage supplied at all times (overload protected)
4	1269 (OG/RD)	Anti–theft, indicator, control
5	875 (BK/LB)	Ground
6	1958 (GY/YE)	Sunload sensor (19E663), signal – passenger side

C289 (WH)

18B518

Temperature blend
door actuator
(19E616)

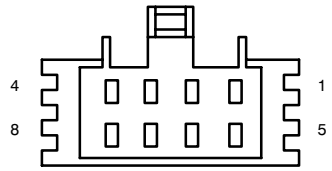

F08059

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	437 (YE/LG)	Temperature blend door actuator (19E616), control, signal
4	–	not used
5	–	not used
6	–	not used
7	295 (LB/PK)	Voltage supplied in Start and Run (overload protected)
8	57 (BK)	Ground

C288 (BK)

18B518

Heater blower motor
(19805)

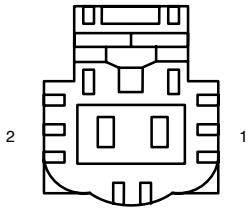

F02025

* with EATC

Pin	Circuit	Circuit function
1	399 (BN/YE)	Blower motor relay, output
2	261 (OG/BK)	Front blower motor (19805), speed control
	*755 (BN/WH)	Blower motor to Blower motor speed controller