Master window adjust switch (14529)

Schematic

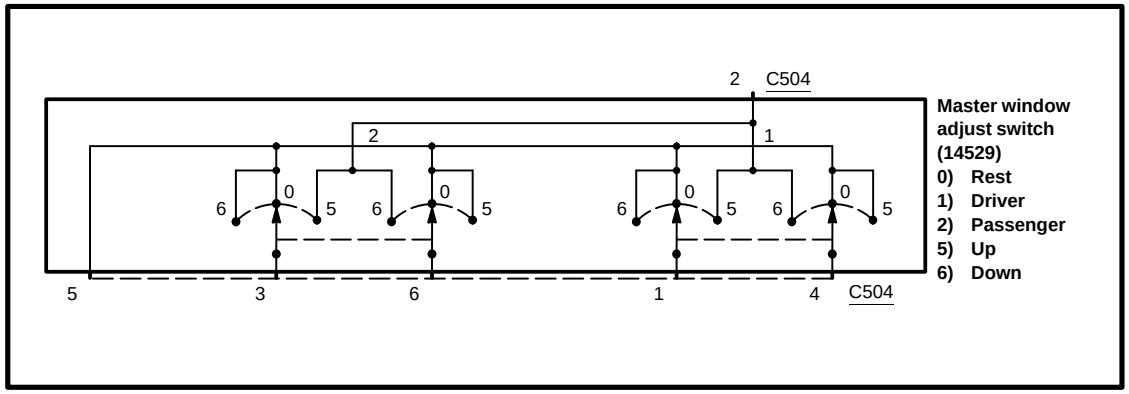

Terminals

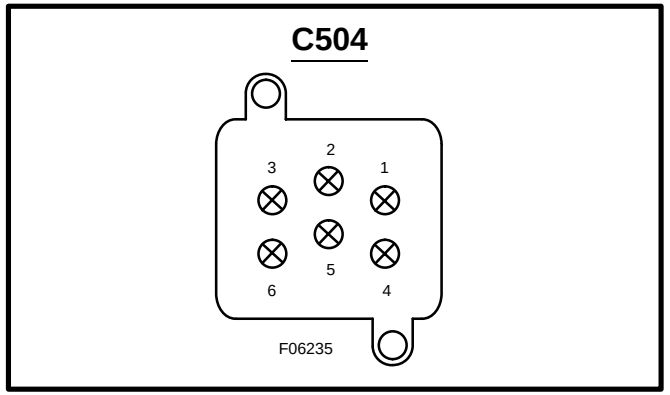

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Left front window circuit	2 and 1	Up	Closed circuit
	2 and 4	Down	Closed circuit
	5 and 1 5 and 4	Rest	Closed circuit
Right front window circuit	2 and 3	Up	Closed circuit
	2 and 6	Down	Closed circuit
	5 and 3 5 and 6	Rest	Closed circuit