C1852

N99
Power seat switch

14A699

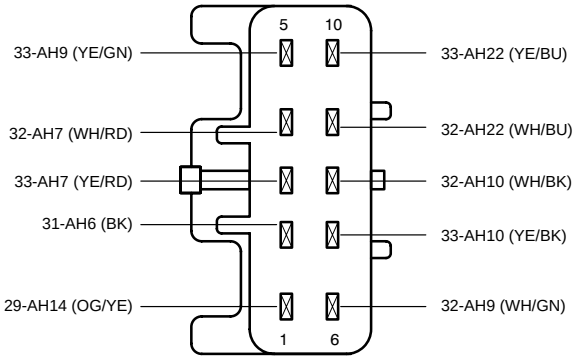

F10041

19K315

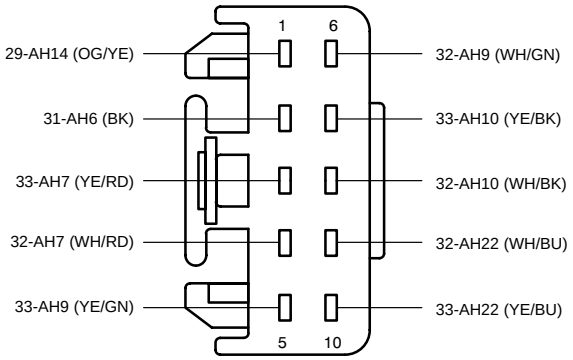

F10042

C1855

18C619

E174
High mounted stop-lamp (13A613)

F02023

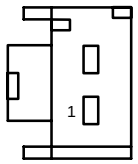

Pin	Circuit	Circuit function
1	31-LG6 (BK)	Ground
2	15S-LG6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C1856

8C290

M38
Second cooling fan motor

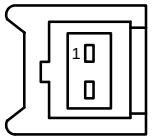

F02012

Pin	Circuit	Circuit function
1	31-PA16 (BK)	Ground
2	15S-PA16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C1859

8C290

M37
Engine cooling fan motor

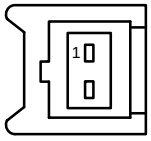

F02012

Pin	Circuit	Circuit function
1	31-PA6 (BK)	Ground
2	15S-PA6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched