C456

14K024

N278
Ignition switch
(11572)

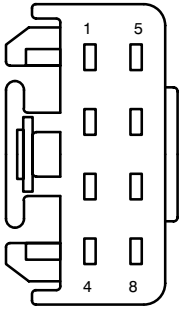

F08074

Pin	Circuit	Circuit function
1	30-BB9 (RD)	Voltage supplied at all times (not overload protected)
2	–	not used
3	30S-TA31 (RD/BK)	Voltage supplied at all times (not overload protected), Switched
4	15-DA1 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
5	50-BB11 (GY/WH)	Voltage, ignition switch in Start (not overload protected)
6	–	not used
7	–	not used
8	75-GG14 (YE/BU) + 75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run

C459

14K024

N282
Multifunction switch



F11003

Pin	Circuit	Circuit function
1	–	not used
2	29S-LE12 (OG/YE)	Voltage supplied at all times (overload protected), Switched
3	–	not used
4	29-LE10 (OG/GN)	Voltage supplied at all times (overload protected)
5	29S-LE10 (OG/GN)	Voltage supplied at all times (overload protected), Switched
6	–	not used
7	31-LG25 (BK)	Ground
8	49S-LG1 (BU)	Pulsed power feed (overload protected), Switched
9	49S-LG2 (BU/RD)	Pulsed power feed (overload protected), Switched
10	29-LG27 (OG/BK)	Voltage supplied at all times (overload protected)
11	15-LG25 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)