C384 (GY)

14A005

Sliding door contact switch, right

Late production



F08307

Pin	Circuit	Circuit function
1	1386 (OG)	Rear Electronic Module (REM) to Door lock actuator assembly, right sliding door, Unlock
2	803 (BN/PK)	Speaker, right rear (18808) –
3	1385 (LG)	Rear Electronic Module (REM) to Door lock actuator assembly, right sliding door, Lock
4	802 (OG/RD)	Speaker, right rear (18808) +
	825 (TN/LG)	Speaker, right rear (18808) +
5	1251 (YE/RD)	Power sliding door motor, return
6	1227 (WH)	Detent switch, RH, to, Module, power sliding door, RH side
7	1252 (GY/RD)	Module, power sliding door, RH side, to, Latch/unlatch motor, LH
8	–	not used

Early production

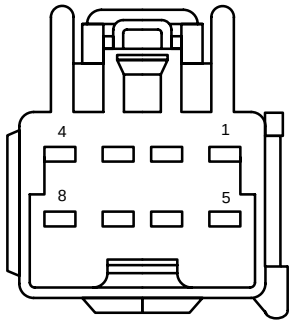

F08213

Pin	Circuit	Circuit function
1	1251 (YE/RD)	Power sliding door motor, return
2	–	not used
3	1227 (WH)	Detent switch, RH, to, Module, power sliding door, RH side
4	1252 (GY/RD)	Module, power sliding door, RH side, to, Latch/unlatch motor, LH
5	802 (OG/RD)	Speaker, right rear (18808) +
	825 (TN/LG)	Speaker, right rear (18808) +
6	1385 (LG)	Rear Electronic Module (REM) to Door lock actuator assembly, right sliding door, Lock
7	1386 (OG)	Rear Electronic Module (REM) to Door lock actuator assembly, right sliding door, Unlock
8	803 (BN/PK)	Speaker, right rear (18808) –