## C124 (BK)

**14290**

Brake fluid level switch (2L414)

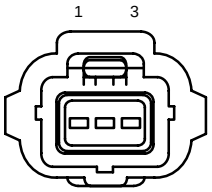


F03093

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 22 (LB/BK) | Brake feed |
| 3 | 547 (LG/YE) | Brake indicator, control |

## C125 (BK)

**14290**

Windshield wiper motor (17508)

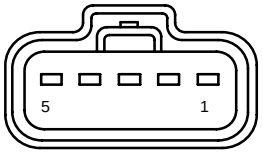


F05091

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 56 (DB/OG) | Wiper high/low relay, switched power, output, High |
| 2 | 58 (WH) | Wiper high/low relay, switched power, output, Low |
| 3 | 57 (BK) | Ground |
| 4 | 950 (WH/BK) | Voltage in Run or Accessory (overload protected) |
| 5 | 65 (DG) | Wiper park relay, switched power, input |

## C127 (BK)

**14290**

Anti–theft hood switch (19A434)

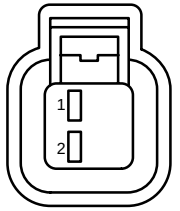


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 23 (TN/LG) | Anti–theft, switch sense |
| 2 | 57 (BK) | Ground |

## C128 (BK)

**12B637**

Mass Air Flow (MAF) sensor (12B579)

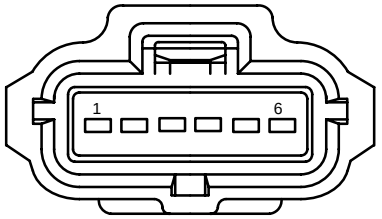


F06077

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 359 (GY/RD) | signal, return |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 3 | 570 (BK/WH) | Ground |
| 4 | 968 (TN/LB) | Mass Air Flow (MAF) sensor (12B579), signal, return |
| 5 | 967 (LB/RD) | Mass Air Flow (MAF) sensor (12B579), output |
| 6 | 743 (GY) | Intake Air Temperature (IAT) sensor (12A697), input |