C167 (BK)

7C078

Digital Transmission Range (DTR) sensor (7F293)

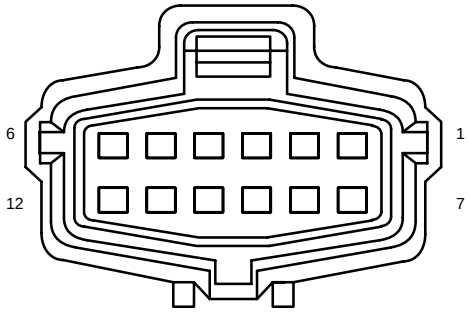

F12040

Pin	Circuit	Circuit function
1	–	not used
2	359 (GY/RD)	signal return
3	199 (LB/YE)	Digital Transmission Range (DTR) sensor, TR3A
4	1144 (YE/BK)	Digital Transmission Range (DTR) sensor, TR1
5	1145 (LB/BK)	Digital Transmission Range (DTR) sensor, TR2
6	1143 (WH/BK)	Digital Transmission Range (DTR) sensor, TR4
7	–	not used
8	–	not used
9	298 (VT/OG)	Voltage in Run (overload protected)
10	33 (WH/PK)	Switch power to starter solenoid
11	140 (BK/PK)	Voltage supplied in reverse
12	262 (BN/PK)	Voltage supplied in start (overload protected)

C171 (GN/WH)

12B637

Heated Oxygen Sensor (HO2S) #11 (9F472)

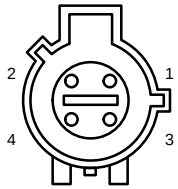

F04124

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
3	359 (GY/RD)	signal return
4	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input

C172

7C078

Heated Oxygen Sensor (HO2S) #21 (9F472)

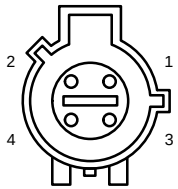

F04124

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #12 (9G444), heater
3	359 (GY/RD)	signal return
4	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), input

C174 (BK)

12B637

Ignition transformer capacitor 1 (18801)

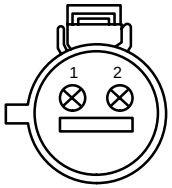

F02529

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	570 (BK/WH)	Ground