CALIFORNIA

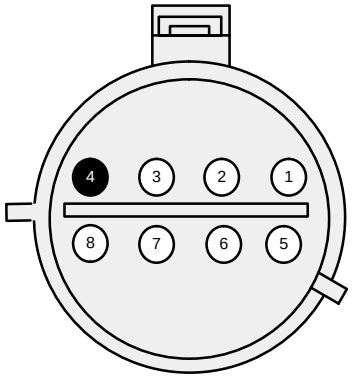

C442 (BK)
FUEL TANK ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	351 (BN/WH)	Power to Engine Sensors
2	791 (RD/PK)	Fuel Tank Pressure Transducer
3	359 (GY/RD)	Sensor Signal Return
4	–	NOT USED
5	396 (BK/OG)	Tachometer Gauge – Fuel #1 Ground
6	787 (PK/BK)	Fuel Pump Power
7	789 (BN/WH)	Fuel Pump Sender Ground
8	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender

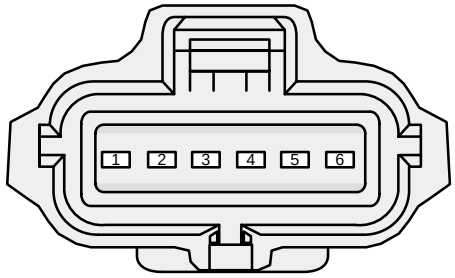

C1041
MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	359 (GY/RD)	Sensor Signal Return
2	361 (RD)	Power (Hot in Start And Run)
3	570 (BK/WH)	Power Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Output
6	743 (GN)	Intake Air Temperature (IAT) Sensor

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C242a	13-39, 13-41
C242b	13-40, 13-42
C250b	60-7
C250c	60-8
C1048	29-8