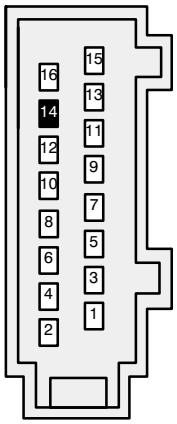

C362

FLOOR CONSOLE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	694 (BK/LG)	Ground
2	694 (BK/LG)	Ground
3	694 (BK/LG)	Ground
4	827 (TN/WH)	LH Rear Speaker/Mid Output
5	800 (GY/LB)	LH Rear Speaker Input
6	801 (TN/YE)	LH Rear Speaker/Mid Input
7	825 (TN/LG)	RH Rear Speaker Output
8	802 (OG/RD)	RH Rear Speaker Input
9	803 (BN/PK)	RH Rear Speakers Input
10	19 (LB/RD)	Illumination Feed
11	57 (BK)	Ground
12	832 (LB/PK)	Signal, from Rear Entertainment Module to Radio
13	833 (TN)	Signal, from Rear Entertainment Module to Radio
14	–	NOT USED
15	729 (RD/WH)	Power (Hot at all Times)
16	1068 (LG/BK)	Signal, from Rear Entertainment Module to Radio

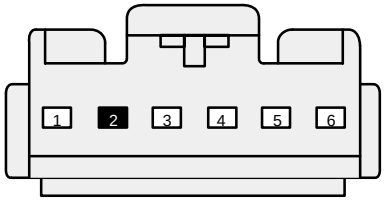

C910

LEFT VIDEO DISPLAY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	137 (YE/BK)	Power (Hot in Acc or Run)
2	–	NOT USED
3	57 (BK)	Ground
4	48	Shield
5	1540 (DG)	Signal, from Rear Entertainment Module to Video Display
6	1541 (DB)	Signal, from Rear Entertainment Module to Video Display