C4179 (GN)

* Early production
** Late production

13A409

Third row folding seat switch, left rear

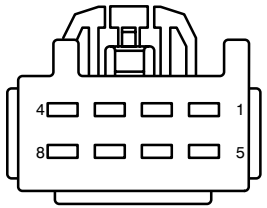

F08193

Pin	Circuit	Circuit function
1	–	not used
2	57 (BK)	Ground
3	*2112 (OG/BK)	Third row folding seat motor, left, Up, feed
	**1948 (LB/WH)	Third row folding seat motor, left, Up, feed
4	51 (BK/WH)	Third row folding seat relay, left, output
5	–	not used
6	–	not used
7	*2111 (OG/WH)	Third row folding seat motor, left, Down, feed
	**1947 (DG/WH)	Third row folding seat motor, left, Down, feed
8	57 (BK)	Ground

C4180 (BU)

* Early production
** Late production

13A409

Third row folding seat switch, right rear

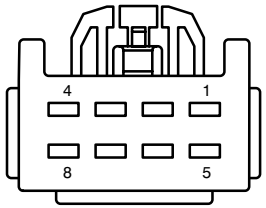

F08167

Pin	Circuit	Circuit function
1	–	not used
2	57 (BK)	Ground
3	*2113 (YE/WH)	Third row folding seat motor, right, Down, feed
	**1949 (OG/BK)	Third row folding seat motor, right, Down, feed
4	1946 (OG/LB)	Third row folding seat relay, right, output
5	–	not used
6	–	not used
7	*2114 (YE/BK)	Third row folding seat motor, right, Up, feed
	**1950 (PK/LB)	Third row folding seat motor, right, Up, feed
8	57 (BK)	Ground

C4181 (GY)

13A409

Third row folding seat motor, left

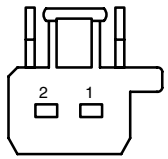

F02053

Pin	Circuit	Circuit function
1	1947 (DG/WH)	Third row folding seat motor, left, Down, feed
2	1948 (LB/WH)	Third row folding seat motor, left, Up, feed