C100

12B637

Y31
A/C clutch solenoid



F03073

Pin	Circuit	Circuit Function
1	347 (BK/YE)	A/C clutch relay, switched output
2	57 (BK)	Ground

C101

12B637

B43
Crankshaft position sensor

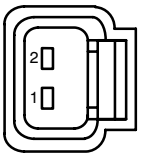

F02331

Pin	Circuit	Circuit Function
1	349 (DB)	Crankshaft position sensor -
2	350 (GY)	Crankshaft position sensor +

C102

12B637

O5
Generator

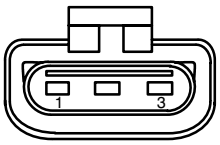

F03074

Pin	Circuit	Circuit Function
1	35 (OG/LB)	Voltage supplied at all times (overload protected)
2	–	not used
3	904 (LG/RD)	Generator/Battery indicator, control

C103

12B637

N17
Oil pressure switch

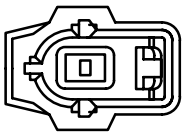

F01016

Pin	Circuit	Circuit Function
1	31 (WH/RD)	Engine oil pressure indicator, control

C109

12B637

B45
Knock sensor

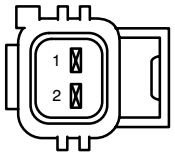

F02107

Pin	Circuit	Circuit Function
1	1273 (YE)	Powertrain Control Module (PCM), to knock sensor
2	310 (YE/RD)	Knock sensor

C110 (BK)

13N052

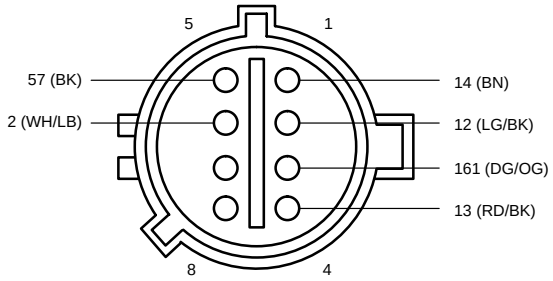

F08052

14290

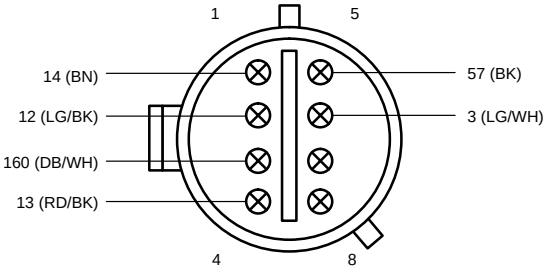

F08050