C3077b

14B079

Rear Seat Entertainment (RSE) module

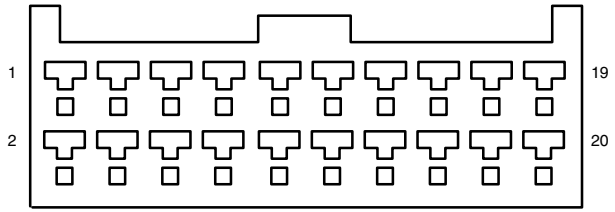

F20011

Pin	Circuit	Circuit function
1	(WH)	Audio signal positive, Left, input
2	–	not used
3	(BK)	Audio signal negative, Left, input
4	–	not used
5	(RD)	Audio signal positive, Right, input
6	–	not used
7	(GN)	Audio signal negative, Right, input
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	(RD)	video +
13	–	not used
14	(RD)	Audio signal positive, Left
15	–	not used
16	(RD)	Audio signal positive, Right
17	–	not used
18	(RD)	video + output
19	–	not used
20	–	not used

C3084 (GY)

14405

Running board lamp, left front

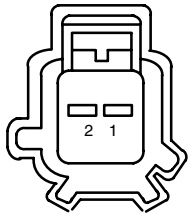

F02377

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	667 (WH/RD)	Interior lamp relay, switched power, output

C3085 (GY)

14405

Running board lamp, left rear

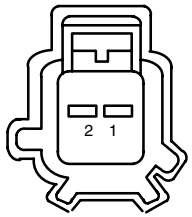

F02377

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	667 (WH/RD)	Interior lamp relay, switched power, output

C3086 (GY)

14405

Running board lamp, right front

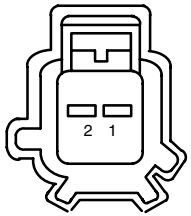

F02377

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	667 (WH/RD)	Interior lamp relay, switched power, output