C465

14A411

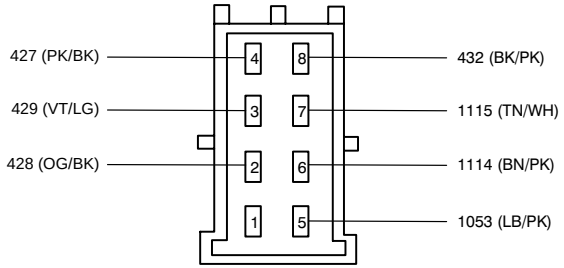

14A005

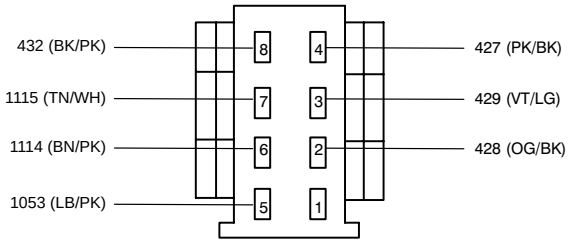

C466

14A005

A14
Subwoofer amplifier
(18C804)

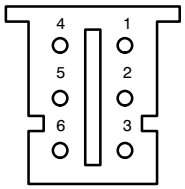

F06089

Pin	Circuit	Circuit function
1	167 (BN/OG)	TX, signal
2	168 (RD/BK)	TX, signal
3	173 (DG/VT)	Radio (18806) – Subwoofer, High, mute
4	694 (BK/LG)	Ground
5	–	not used
6	828 (VT/LB)	Voltage supplied at all times (overload protected)

C475

14A005

E174
High mounted sto-
plamp (13A613)

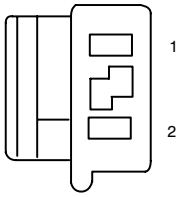

Pin	Circuit	Circuit function
1	511 (LG)	Brake pedal position switch (13480), to stoplamps
2	57 (BK)	Ground

C484

14A005

Y17
Speaker, left rear
(18808)

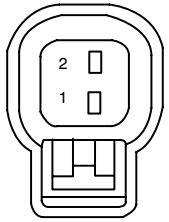

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –