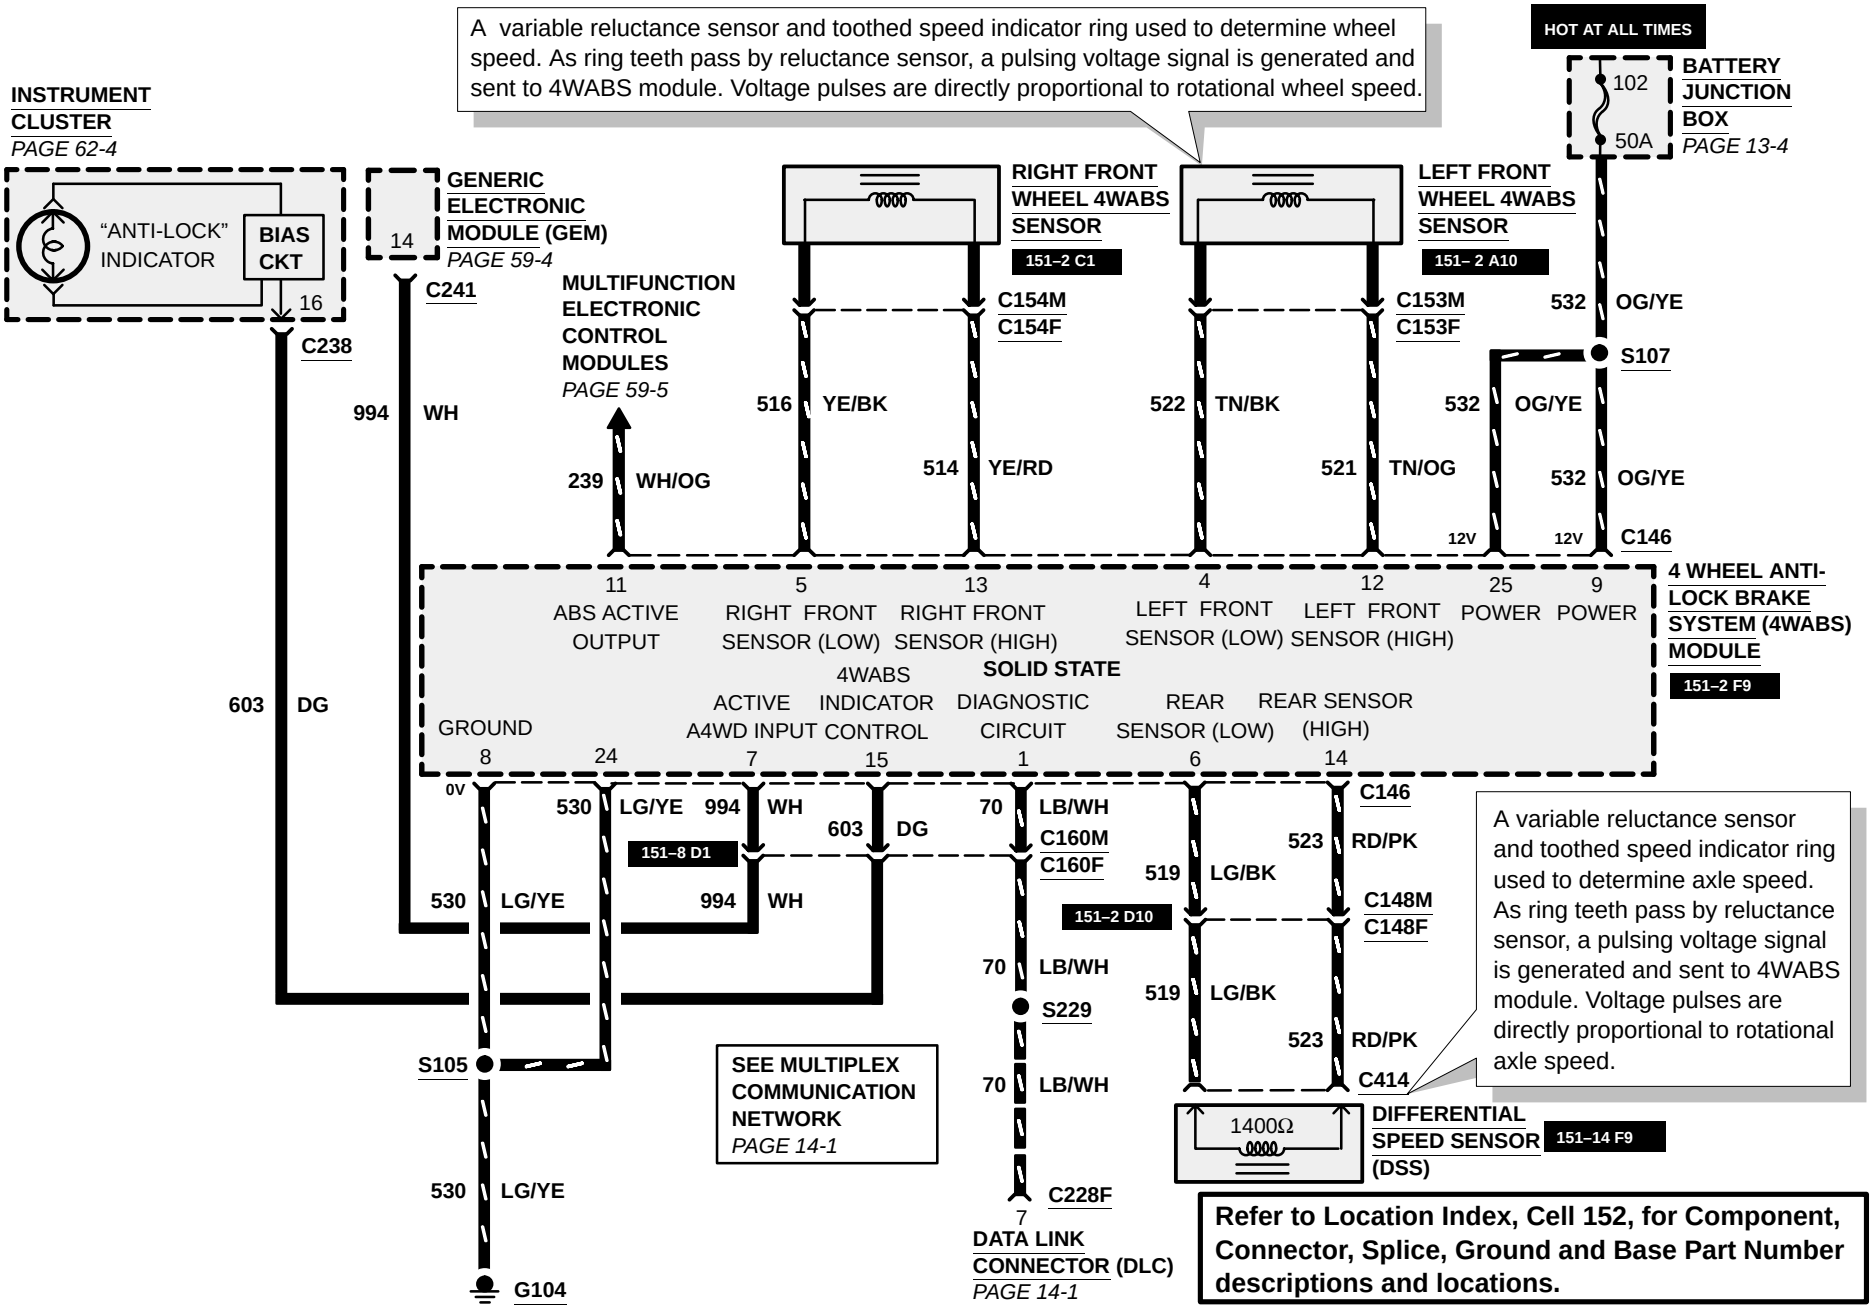
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-4
102
50A
INSTRUMENT CLUSTER
PAGE 62-4
"ANTI-LOCK" INDICATOR
BIAS CKT
16
C238
14
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-4
C241
994 WH
MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-5
239 WH/OG
RIGHT FRONT WHEEL 4WABS SENSOR
151–2 C1
C154M
C154F
516 YE/BK
514 YE/RD
LEFT FRONT WHEEL 4WABS SENSOR
151– 2 A10
C153M
C153F
522 TN/BK
521 TN/OG
532 OG/YE
S107
532 OG/YE
532 OG/YE
12V
12V
C146
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
151–2 F9
11 ABS ACTIVE OUTPUT
5 RIGHT FRONT SENSOR (LOW)
13 RIGHT FRONT SENSOR (HIGH)
4 LEFT FRONT SENSOR (LOW)
12 LEFT FRONT SENSOR (HIGH)
25 POWER
9 POWER
SOLID STATE
603 DG
GROUND
8
24
A4WD INPUT
7
4WABS INDICATOR CONTROL
15
DIAGNOSTIC CIRCUIT
1
REAR SENSOR (LOW)
6
REAR SENSOR (HIGH)
14
0V
530 LG/YE
994 WH
603 DG
70 LB/WH
C160M
C160F
151–8 D1
530 LG/YE
994 WH
519 LG/BK
523 RD/PK
C146
C148M
C148F
151–2 D10
70 LB/WH
S229
519 LG/BK
523 RD/PK
C414
S105
70 LB/WH
1400Ω
DIFFERENTIAL SPEED SENSOR (DSS)
151–14 F9
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
530 LG/YE
C228F
7
DATA LINK CONNECTOR (DLC)
PAGE 14-1
G104
A variable reluctance sensor and toothed speed indicator ring used to determine axle speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational axle speed.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.