C194

12B637

Ignition transformer capacitor 2

D3AB-14489-FB (F)

Pin	Circuit	Circuit Function
1	20 (WH/LB)	Distributor electronic control feed

C197a

14A280

Starter motor



XL3T-14463-MA

Pin	Circuit	Circuit Function
1	2037 (RD)	Battery cable - positive

C197b

14A280

Starter motor



F68U-14463-AA

Pin	Circuit	Circuit Function
1	113 (YE/LB)	Starting motor to starter motor relay

C199

7C078

Transmission hardware unit

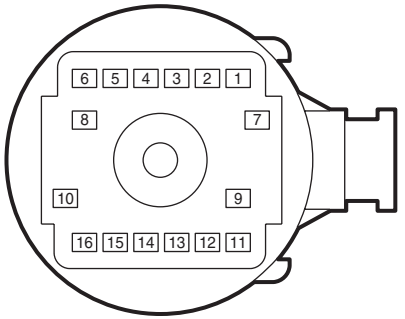

1L2T-14A464-PB (F)

Pin	Circuit	Circuit Function
1	966 (LB/PK)	PCM to electronic pressure control #2
2	923 (OG/BK)	PCM to transmission oil temperature
3	1139 (VT/YE)	Fuse B70 to air intake functions
4	770 (WH)	Electrical shift 4 x 4 module to motor position #4
5	924 (BN/OG)	PCM to transmission coast clutch solenoid
6	971 (PK/BK)	PCM to transmission shift solenoid #3
7	—	not used
8	—	not used
9	—	not used
10	—	not used
11	925 (WH/YE)	PCM to electronic pressure control #1
12	359 (GY/RD)	Sensor, signal return
13	—	not used
14	480 (VT/YE)	PCM to transmission clutch control
15	315 (VT/OG)	PCM to transmission shift solenoid #2
16	237 (OG/YE)	PCM to transmission shift solendoid #1