C380

14A012

Power point
(19N236)

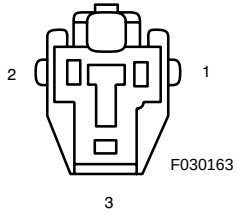

F030163

Pin	Circuit	Circuit function
1	40 (LB/WH)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C381 (GY)

14A699

Safety belt assembly, left

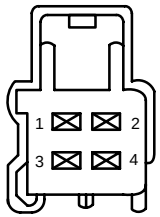

F04105

Pin	Circuit	Circuit function
1	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
2	85 (BN/LB)	Safety belt buckle switch (10B924), input
3	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
4	649 (BK/OG)	dedicated ground

C387 (WH)

14A005

Power antenna module

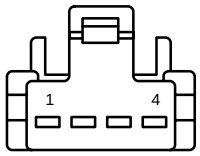

F04145

Pin	Circuit	Circuit function
1	543 (DG)	Voltage supplied at all times (overload protected)
2	745 (RD/PK)	Antenna
3	655 (RD/OG)	Power, Hot in Start with Park or Neutral
4	57 (BK)	Ground

C388a (BK)

14A005

Rear Control Unit
(RCU)

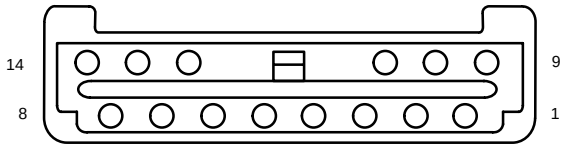

F14015

Pin	Circuit	Circuit function
1	803 (BN/PK)	Speaker, right rear (18808) -
2	802 (OG/RD)	Speaker, right rear (18808) +
3	811 (DG/OG)	Speaker, right front (18808) -
4	805 (WH/LG)	Speaker, right front (18808) +
5	801 (TN/YE)	Speaker, left rear (18808) -
6	800 (GY/LB)	Speaker, left rear (18808) +
7	813 (LB/WH)	Speaker, left front (18808) -
8	804 (OG/LG)	Speaker, left front (18808) +
9	–	not used
10	745 (RD/PK)	Antenna
11	–	not used
12	694 (BK/LG)	Ground
13	694 (BK/LG)	Ground
14	720 (RD/YE)	Voltage supplied at all times (overload protected)