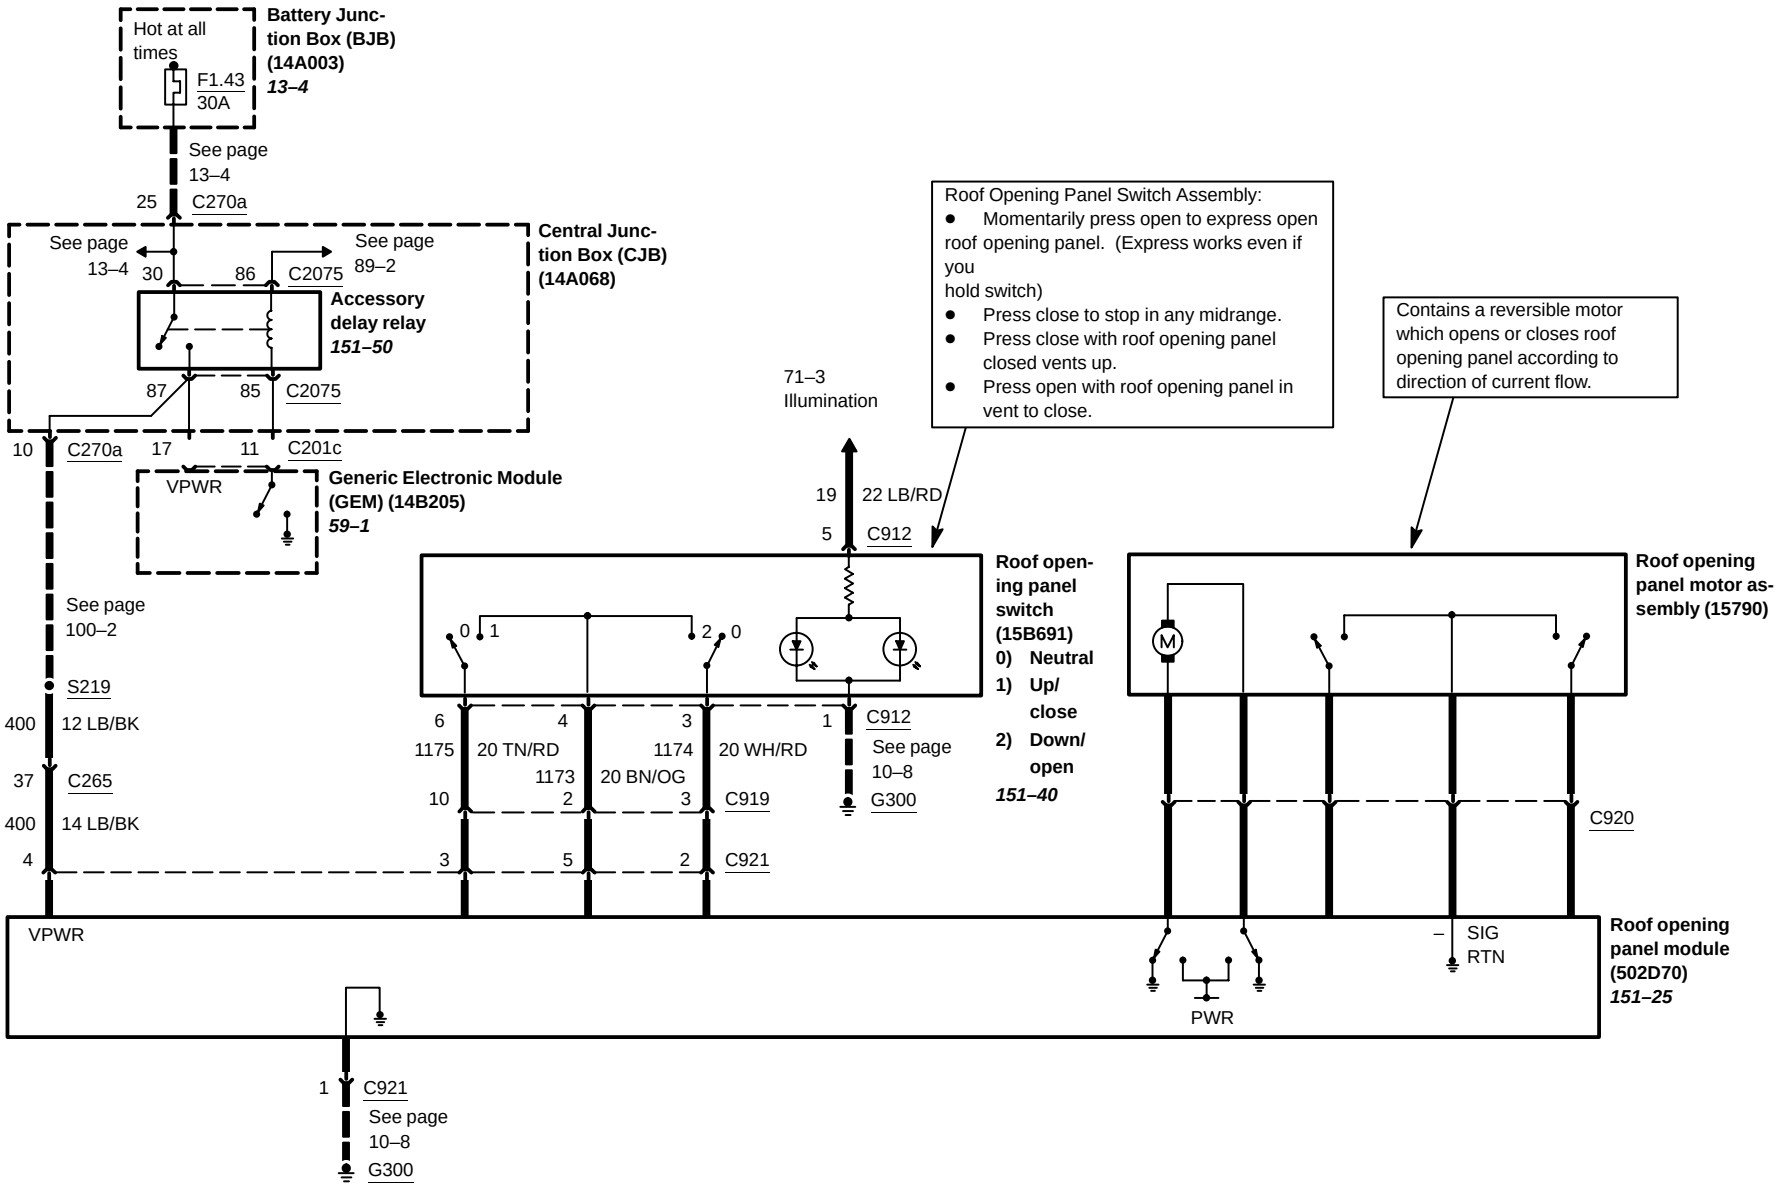
Hot at all times
F1.43
30A
Battery Junction Box (BJB) (14A003)
13–4
See page 13–4
25
C270a
See page 13–4
30
86
C2075
See page 89–2
Central Junction Box (CJB) (14A068)
Accessory delay relay
151–50
87
85
C2075
10
C270a
17
11
C201c
VPWR
Generic Electronic Module (GEM) (14B205)
59–1
See page 100–2
S219
400
12 LB/BK
37
C265
400
14 LB/BK
4
VPWR
1
C921
See page 10–8
G300
71–3
Illumination
19
22 LB/RD
5
C912
Roof Opening Panel Switch Assembly:
Momentarily press open to express open roof opening panel. (Express works even if you hold switch)
Press close to stop in any midrange.
Press close with roof opening panel closed vents up.
Press open with roof opening panel in vent to close.
Roof opening panel switch (15B691)
0) Neutral
1) Up/close
2) Down/open
151–40
6
1175
20 TN/RD
4
1173
20 BN/OG
3
1174
20 WH/RD
1
C912
See page 10–8
G300
10
2
3
C919
3
5
2
C921
Contains a reversible motor which opens or closes roof opening panel according to direction of current flow.
Roof opening panel motor assembly (15790)
C920
PWR
–
SIG RTN
Roof opening panel module (502D70)
151–25