C3044 (WH)

13A409

Mode door actuator, rear (19E616)

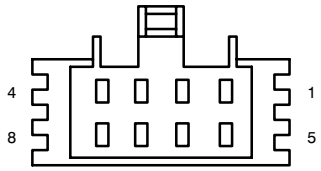

F08059

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	1131 (LG)	auxiliary mode door, feed
8	1137 (YE/LG	auxiliary mode door, return

C3063 (BK)

14B079

Power point, console 1

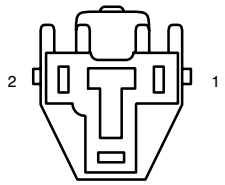

F03193

* all others
** Early production Expedition

Pin	Circuit	Circuit function
1	**1049 (BN/PK)	Voltage supplied at all times (overload protected)
	*131 (VT/OG)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C3064 (BK)

14B079

Power point, console 2

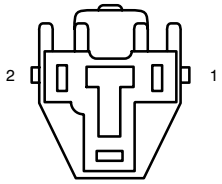

F03193

Pin	Circuit	Circuit function
1	131 (VT/OG)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C3065 (WH)

14A699

Safety belt buckle switch, driver

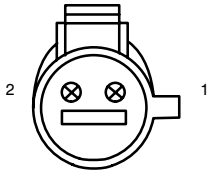

F02575

Pin	Circuit	Circuit function
1	85 (BN/LB)	Safety belt buckle switch, driver, signal
2	649 (BK/OG)	Ground

C3066 (WH)

14A005/14A699

Safety belt buckle switch, passenger

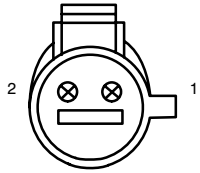

F02575

Pin	Circuit	Circuit function
1	1514 (RD/BK)	Safety belt buckle switch, passenger, signal
2	649 (BK/OG)	Ground