C504a

14A005

N447
Master window adjust switch (14529)

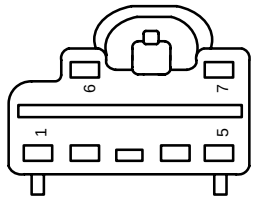

F07060

Pin	Circuit	Circuit function
1	314 (TN/LB)	Window switch, feed, right front, Up
2	313 (WH/YE)	Window switch, feed, right front, Up
3	995 (GY)	Window motor, feed, Down
4	991 (TN/LB)	Master window adjust switch (14529), feed, Down
5	922 (WH/BK)	Master window adjust switch (14529), feed, Up
6	57 (BK)	Ground
7	170 (RD/LB)	Window lockout, switched power, output

C504b

14A005

N447
Master window adjust switch (14529)

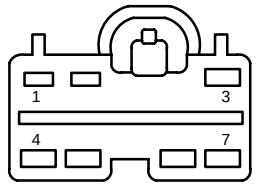

F07043

Pin	Circuit	Circuit function
1	296 (WH/VT)	Fused accessory relay, switched power, output
2	57 (BK)	Ground
3	193 (YE/LG)	Window safety relay, switched output
4	320 (RD/BK)	Window switch, feed, right rear, Down
5	57 (BK)	Ground
6	316 (YE/LB)	Window switch, feed, left rear,Up
7	317 (GY/OG)	Window switch, feed, left rear, Down