Late build

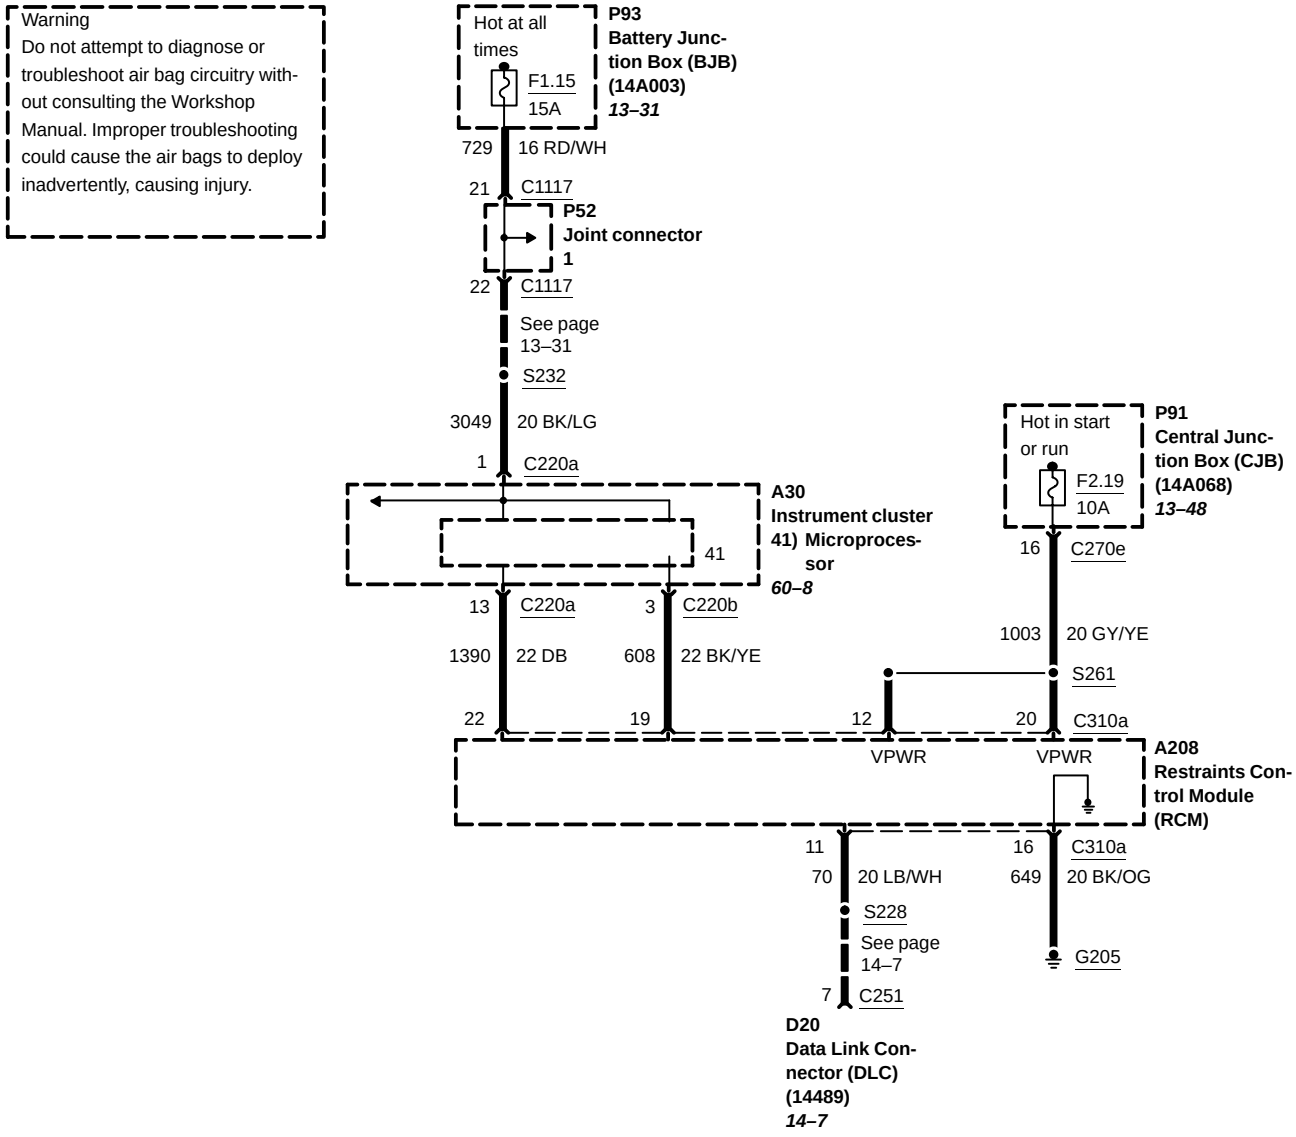
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot at all times
F1.15
15A
P93
Battery Junction Box (BJB)
(14A003)
13–31
729
16 RD/WH
21
C1117
P52
Joint connector
1
22
C1117
See page 13–31
S232
3049
20 BK/LG
1
C220a
A30
Instrument cluster
41) Microprocessor
60–8
41
13
C220a
3
C220b
1390
22 DB
608
22 BK/YE
22
19
Hot in start or run
F2.19
10A
P91
Central Junction Box (CJB)
(14A068)
13–48
16
C270e
1003
20 GY/YE
S261
12
20
C310a
VPWR
VPWR
A208
Restraints Control Module
(RCM)
11
70
20 LB/WH
S228
See page 14–7
7
C251
16
C310a
649
20 BK/OG
G205
D20
Data Link Connector (DLC)
(14489)
14–7