C218a (BN)

* XLS

14401

Air bag sliding contact (14A664)

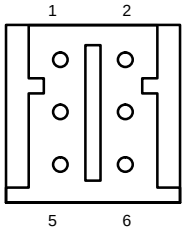

F06329

Pin	Circuit	Circuit function
1	151 (LB/BK)	Speed control switch, input
2	6 (YE/LG)	Horn relay, control
	6 (YE/LG)	
3	235 (RD/BK)	Instrument illumination +
	*19 (LB/RD)	Instrument illumination +
4	848 (DG/OG)	Speed control switch, Ground
5	570 (BK/WH)	Ground
6	158 (BK/PK)	Key warning switch (11A127), input

C218b (BN)

14401

Air bag sliding contact (14A664)

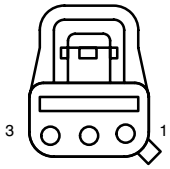

F03181

Pin	Circuit	Circuit function
1	615 (GY/WH)	Driver air bag, return
2	–	not used
3	614 (GY/OG)	Driver air bag, feed, monitor

C220a (WH)

* XLS

14401

Instrument cluster

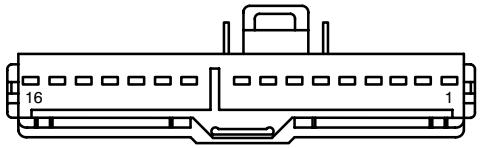

F16022

Pin	Circuit	Circuit function
1	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
2	784 (LB/BK)	Four–wheel drive, indicator, Low
3	783 (GY)	Four–wheel drive, indicator, High
4	203 (OG/LB)	Cruise set, indicator, control
5	484 (OG/BK)	Headlamp switch, on input
6	343 (DB/LG)	Anti–theft, indicator, input
7	57 (BK)	Ground
8	235 (RD/BK)	Instrument illumination, input +
	*19 (LB/RD)	Instrument illumination, input +
9	–	not used
10	2 (WH/LB)	Turn lamps, feed, right front
11	627 (BK/OG)	Door ajar indicator, control
12	253 (DG/WH)	Oil pressure switch (9278), input
13	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
14	–	not used
15	11 (TN/YE)	Tachometer
16	–	not used