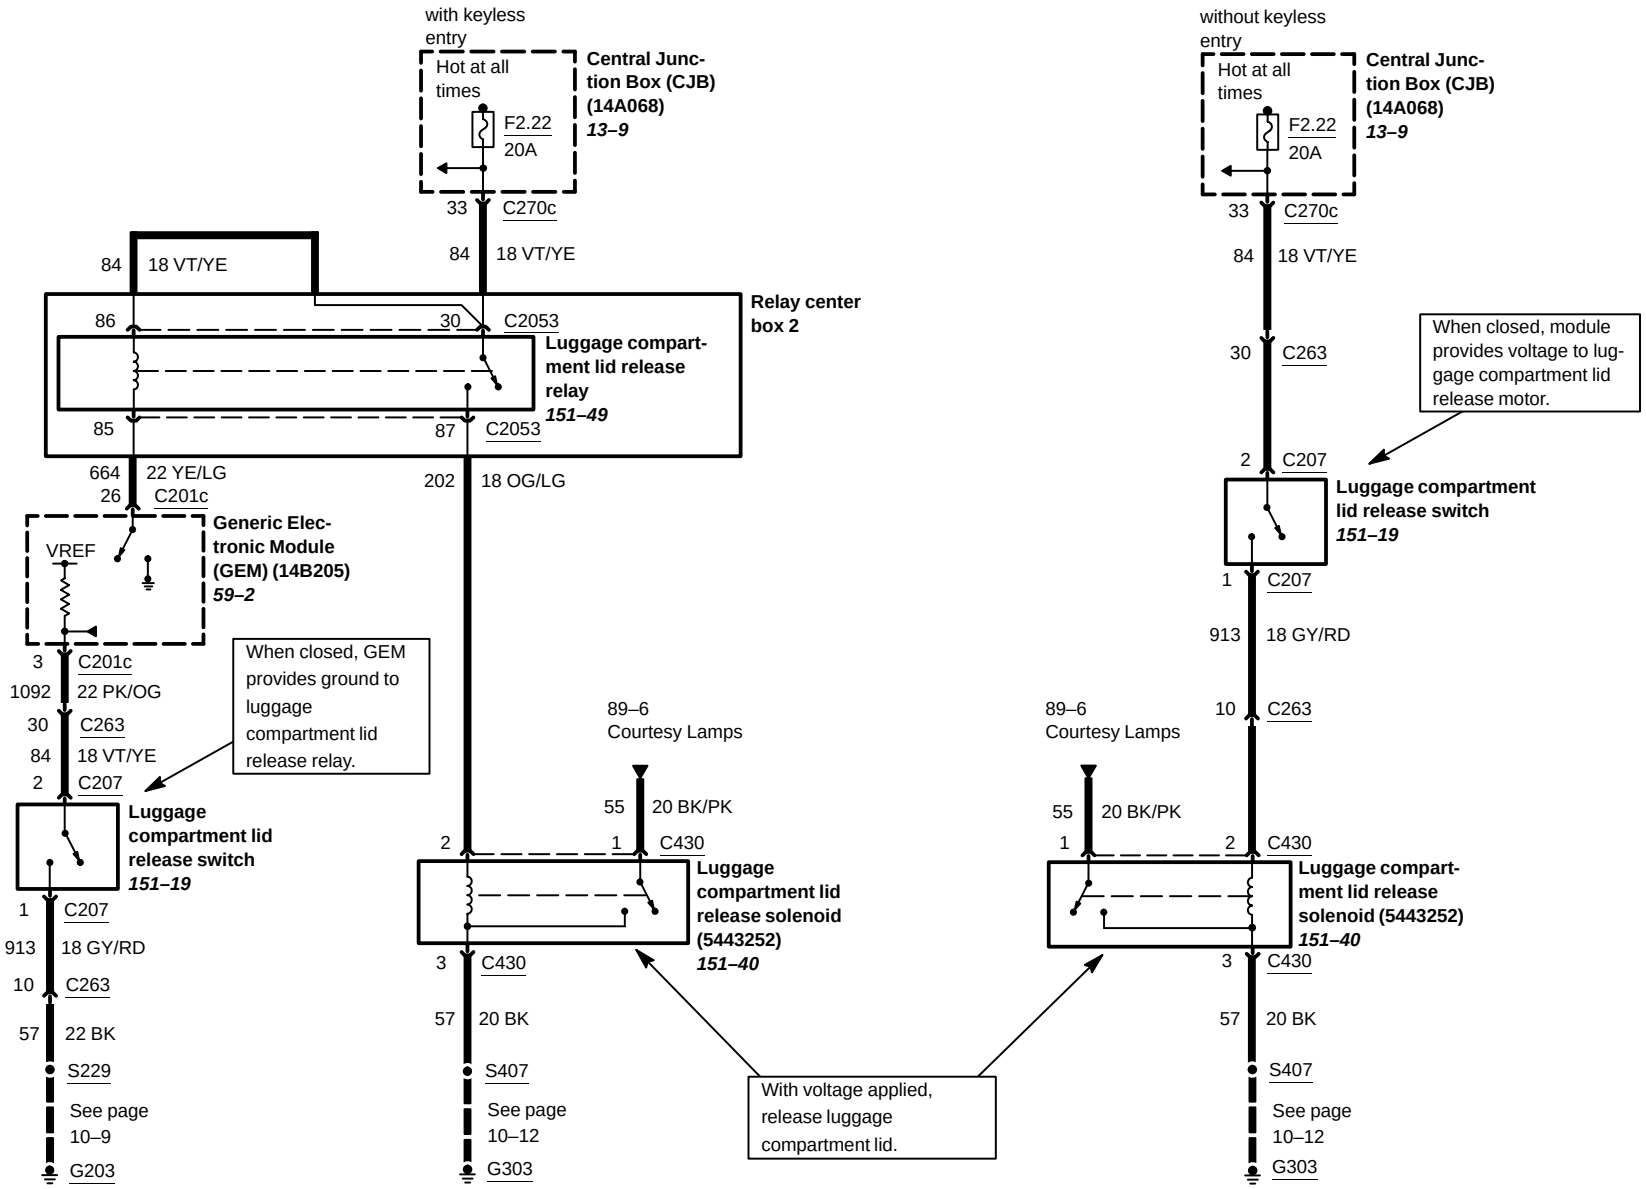
with keyless entry
Hot at all times
F2.22
20A
Central Junction Box (CJB) (14A068)
13–9
33
C270c
84
18 VT/YE
86
30
C2053
Relay center box 2
Luggage compartment lid release relay
151–49
85
87
C2053
664
22 YE/LG
26
C201c
202
18 OG/LG
Generic Electronic Module (GEM) (14B205)
59–2
VREF
3
C201c
1092
22 PK/OG
30
C263
84
18 VT/YE
2
C207
When closed, GEM provides ground to luggage compartment lid release relay.
Luggage compartment lid release switch
151–19
1
C207
913
18 GY/RD
10
C263
57
22 BK
S229
See page 10–9
G203
89–6
Courtesy Lamps
55
20 BK/PK
2
1
C430
Luggage compartment lid release solenoid (5443252)
151–40
3
C430
57
20 BK
S407
See page 10–12
G303
With voltage applied, release luggage compartment lid.
without keyless entry
Hot at all times
F2.22
20A
Central Junction Box (CJB) (14A068)
13–9
33
C270c
84
18 VT/YE
30
C263
When closed, module provides voltage to luggage compartment lid release motor.
2
C207
Luggage compartment lid release switch
151–19
1
C207
913
18 GY/RD
10
C263
89–6
Courtesy Lamps
55
20 BK/PK
1
2
C430
Luggage compartment lid release solenoid (5443252)
151–40
3
C430
57
20 BK
S407
See page 10–12
G303