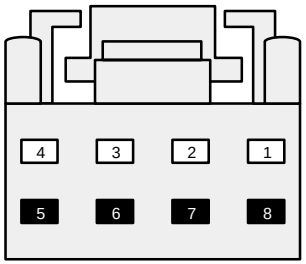

C2007

RADIO

PIN	CIRCUIT	CIRCUIT FUNCTION
1	168 (RD/BK)	Subwoofer High Audio (+)
2	167 (BN/OG)	Subwoofer High Audio (–)
3	48	Audio Shield
4	173 (DG/VT)	Subwoofer High Audio Mute
5	–	NOT USED
6	–	NOT USED
7	–	NOT USED
8	–	NOT USED

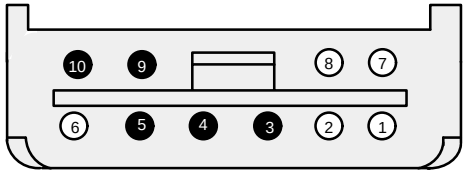

C442

SUBWOOFER AMPLIFIER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	173 (DG/VT)	Subwoofer High Audio Mute
2	694 (BK/LG)	Ground
3	–	NOT USED
4	–	NOT USED
5	–	NOT USED
6	797 (LG/VT)	Power (Hot at All Times)
7	167 (BN/OG)	Subwoofer High Audio (–)
8	168 (RD/BK)	Subwoofer High Audio (+)
9	–	NOT USED
10	–	NOT USED