C1178

12A581

Trailer tow relay, reversing lamp

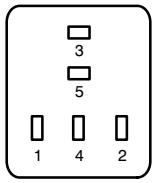

F05139

Pin	Circuit	Circuit function
1	140 (BK/PK)	Voltage supplied in reverse
2	57 (BK)	Ground
3	963 (BK/LG)	Trailer tow relay, reversing lamp, switched output
4	–	not used
5	37 (YE)	Voltage supplied at all times (overload protected)

C1180 (BK)

9D930

Camshaft position sensor (12A112)

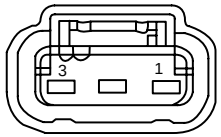

F03267

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	795 (DG)	Camshaft position sensor (12A112), to, Powertrain Control Module (PCM) (12A650)
3	570 (BK/WH)	Ground

C1181

* 6.8L

***12B637** (GY)

9D930 (BK)

Fuel injector 1 (9F593)

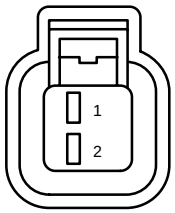

F02069

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1182

* 6.8L

***12B637** (GY)

9D930 (BK)

Fuel injector 2 (9F593)

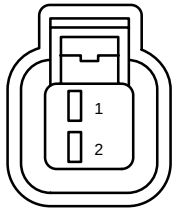

F02069

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1183

* 6.8L

***12B637** (GY)

9D930 (BK)

Fuel injector 3 (9F593)

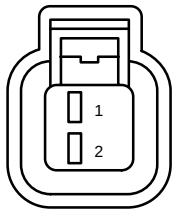

F02069

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1184

* 6.8L

***12B637** (GY)

9D930 (BK)

Fuel injector 4 (9F593)

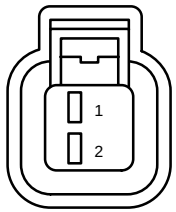

F02069

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)