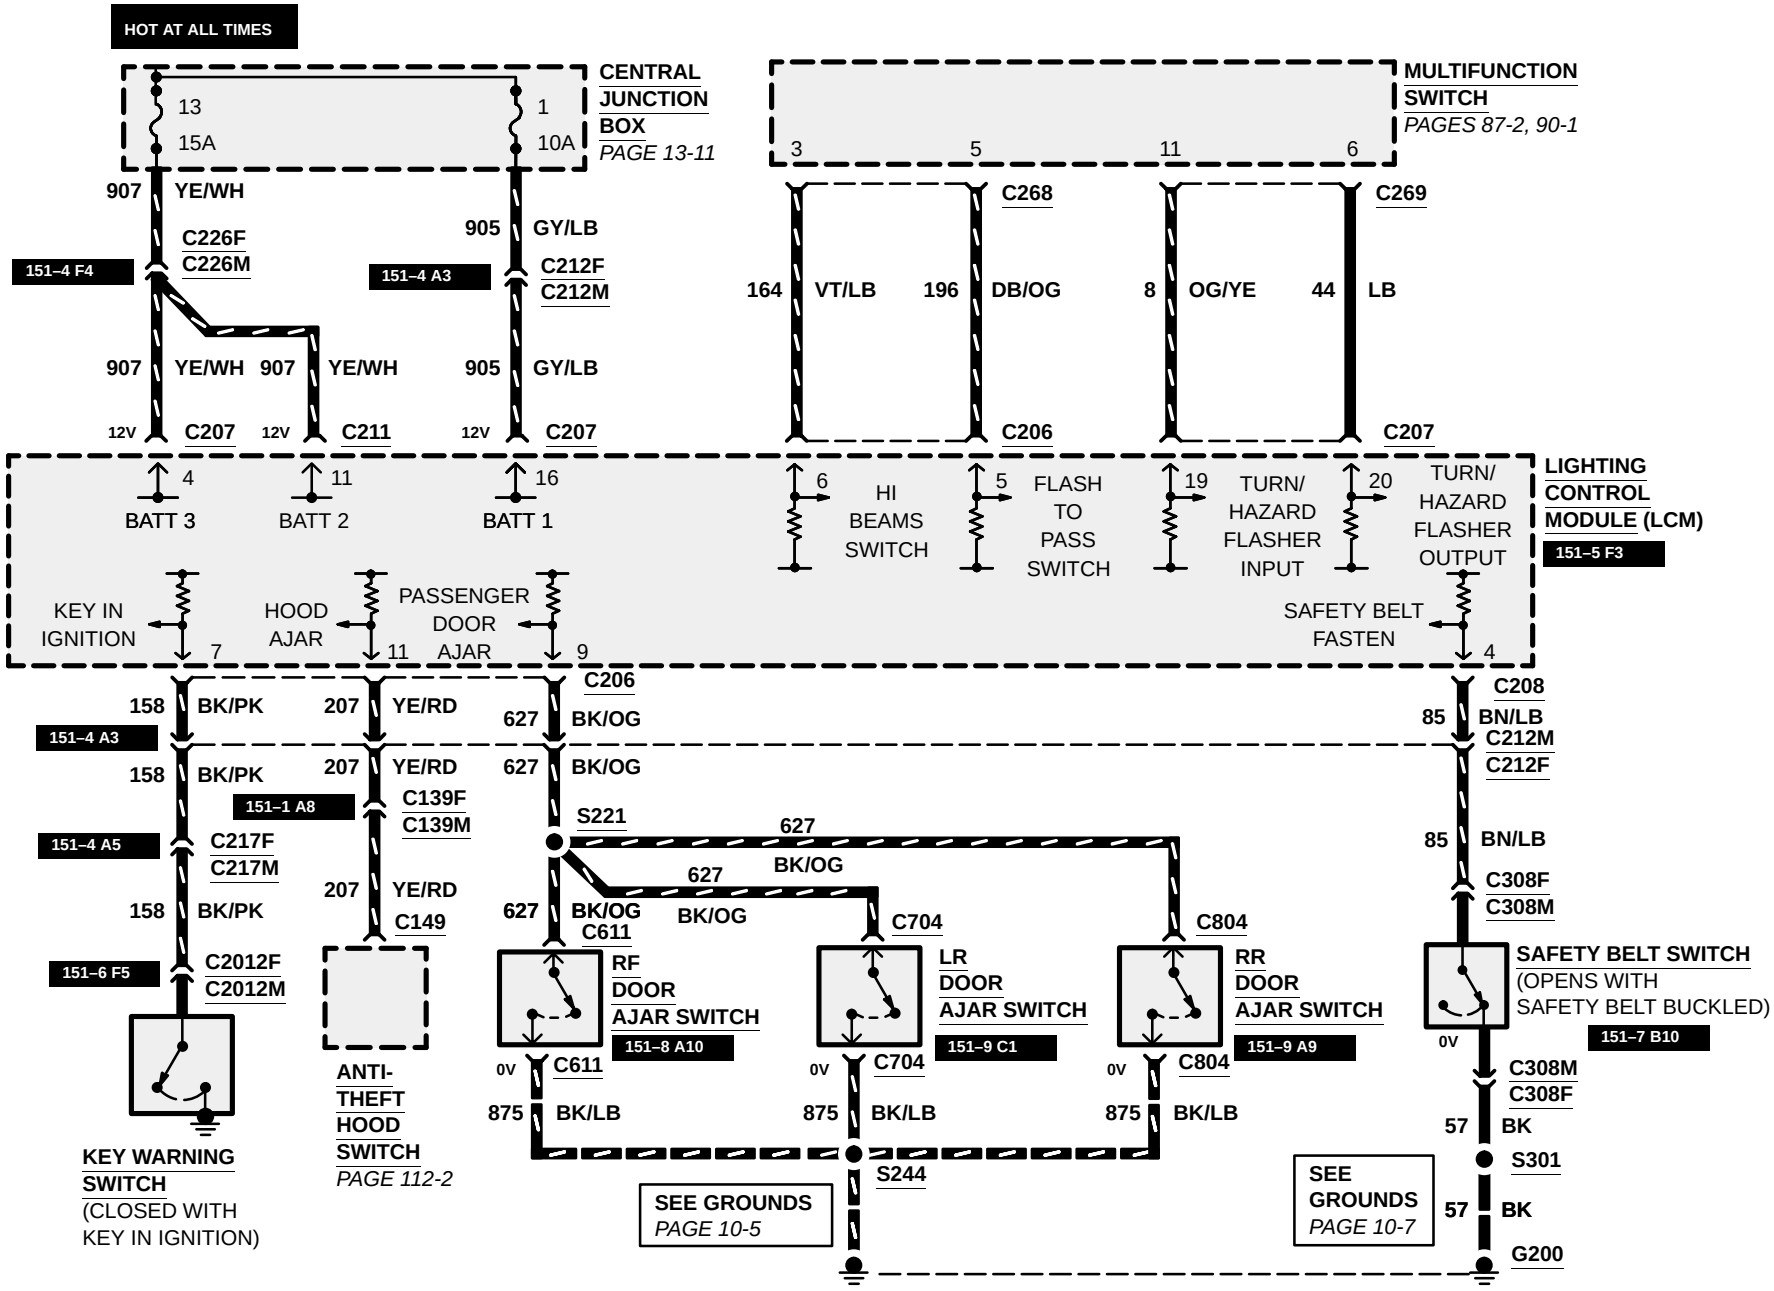
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-11
13
15A
1
10A
MULTIFUNCTION SWITCH
PAGES 87-2, 90-1
3
5
11
6
907 YE/WH
C226F
C226M
151–4 F4
905 GY/LB
151–4 A3
C212F
C212M
C268
C269
164 VT/LB
196 DB/OG
8 OG/YE
44 LB
907 YE/WH
907 YE/WH
905 GY/LB
12V
C207
12V
C211
12V
C207
C206
C207
LIGHTING CONTROL MODULE (LCM)
151–5 F3
4
BATT 3
11
BATT 2
16
BATT 1
6
HI BEAMS SWITCH
5
FLASH TO PASS SWITCH
19
TURN/ HAZARD FLASHER INPUT
20
TURN/ HAZARD FLASHER OUTPUT
KEY IN IGNITION
7
HOOD AJAR
11
PASSENGER DOOR AJAR
9
SAFETY BELT FASTEN
4
158 BK/PK
151–4 A3
207 YE/RD
627 BK/OG
C206
C208
85 BN/LB
C212M
C212F
158 BK/PK
207 YE/RD
627 BK/OG
151–1 A8
C139F
C139M
S221
627 BK/OG
627 BK/OG
627 BK/OG
85 BN/LB
151–4 A5
C217F
C217M
C308F
C308M
158 BK/PK
207 YE/RD
C149
627 BK/OG
C611
C704
C804
151–6 F5
C2012F
C2012M
RF DOOR AJAR SWITCH
151–8 A10
LR DOOR AJAR SWITCH
151–9 C1
RR DOOR AJAR SWITCH
151–9 A9
SAFETY BELT SWITCH
(OPENS WITH SAFETY BELT BUCKLED)
151–7 B10
0V
C611
0V
C704
0V
C804
0V
C308M
C308F
875 BK/LB
875 BK/LB
875 BK/LB
57 BK
S301
57 BK
G200
S244
KEY WARNING SWITCH
(CLOSED WITH KEY IN IGNITION)
ANTI-THEFT HOOD SWITCH
PAGE 112-2
SEE GROUNDS
PAGE 10-5
SEE GROUNDS
PAGE 10-7