C205b

14401

Main light switch

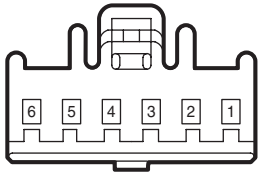

1L2T-14A464-ZA (F)

Pin	Circuit	Circuit Function
1	235 (RD/BK)	Lamp return to pulse width dimmer
2	1034 (BK/WH)	Dome lamp switch to module
3	1404 (YE)	Courtesy lamp mode sw to instrument cluster module: dome lamps
4	1205 (BK)	General ground (type 4 ground)
5	1011 (TN/OG)	Pulse width dimmer module-fused feed
6	14 (BN)	Headlamp switch to tail lamps and side marker lamps

C205c

14401

Main light switch

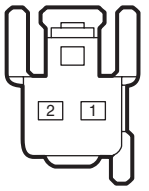

XW4T-14489-DB (F)

Pin	Circuit	Circuit Function
1	1011 (TN/OG)	Pulse width dimmer module-fused feed
2	1205 (BK)	General ground (type 4 ground)

C209

14401

Footwell lamp,
left front

D4AB-15B410-BA

Pin	Circuit	Circuit Function
1	53 (BK/LB)	Courtesy lamp switch to courtesy lamp
2	1205 (BK)	General ground (type 4 ground)