C233

14401

In–vehicle temperature sensor (19C734)



F03032

Pin	Circuit	Circuit function
1	790 (WH/OG)	signal from Electronic Automatic Temperature Control (EATC) module (19980)
2	–	not used
3	470 (PK/BK)	Sensor signal return (reference/ground)

C241

14401

Rear window defrost switch (18578)

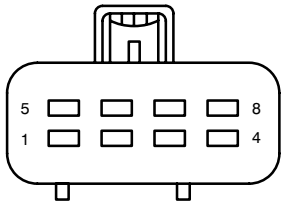

F08060

Pin	Circuit	Circuit function
1	676 (PK/OG)	Ground
2	1010 (DB/OG)	Rear window defrost switch (18578), input
3	–	not used
4	57 (BK)	Illumination Ground
5	–	not used
6	59 (DG/VT)	Fused rear window defrost relay, switched power
7	–	not used
8	19 (LB/RD)	Switch illumination

C250

* 6.0L Diesel
** all others

14401

Ignition switch (11572)

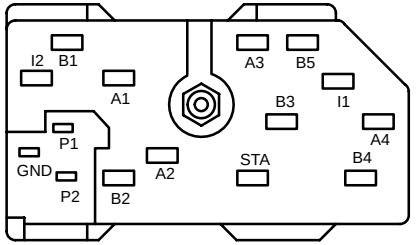

F15014

Pin	Circuit	Circuit function
A1	964 (DB/LG)	fused feed, Accessory
A2	–	not used
A3	1040 (RD/BK)	Voltage in Run (overload protected)
A4	687 (GY/YE)	Voltage in Run (overload protected)
B1	37 (YE)	Voltage supplied at all times (overload protected)
B2	–	not used
B3	37 (YE)	Voltage supplied at all times (overload protected)
B4	1050 (LG/VT)	Voltage supplied at all times (overload protected)
B5	325 (DB/OG)	Voltage supplied at all times (overload protected)
I1	*1044 (WH/YE)	Voltage supplied in Start and Run (overload protected)
I1	*16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
I2	–	not used
P1	–	not used
P2	–	not used
STA	1522 (DG)	Voltage supplied in Start (overload protected)
GND	–	not used