C446

14014

F06112

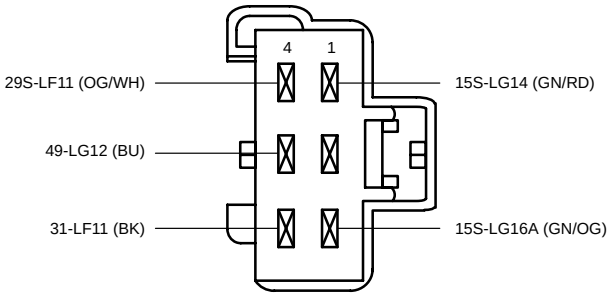

13A412

F06109

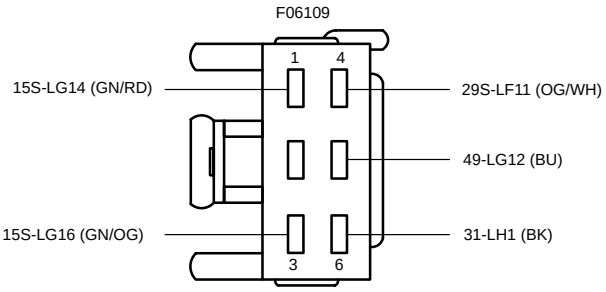

C447

14014

F06112

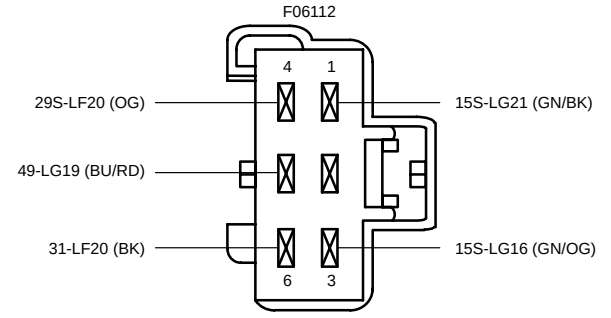

13A412

F06109

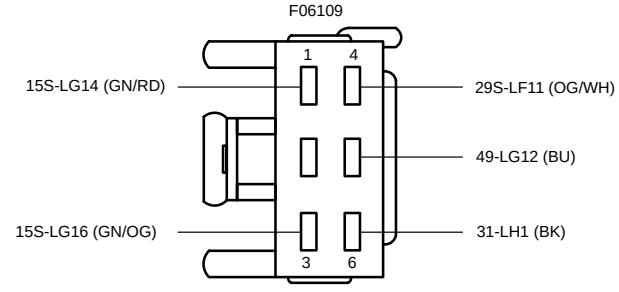

C451a (GN)

14014

A77
Anti–theft/central locking module

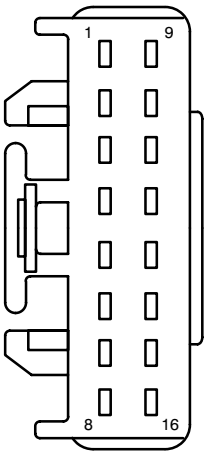

F16029

Pin	Circuit	Circuit Function
1	29-AA17 (OG/WH)	Voltage supplied at all times (overload protected)
2	29S-AA27 (OG/BK)	Voltage supplied at all times (overload protected), switched
3	31S-AA30 (BK/YE)	Ground, switched
4	8-AA36 (WH)	Sensor signal
5	31-AA17 (BK)	Ground
6	32-AA66 (WH/BU)	Switched between: Battery voltage, Ground or Open
7	32-AA65 (WH/GN)	Switched between: Battery voltage, Ground or Open
8	33-AA59 (YE/BK)	Switched between: Battery voltage, Ground or Open
9	–	not used
10	15-AA17 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
11	31-AA57 (BK)	Ground
12	33-AA34 (YE/GN)	Switched between: Battery voltage, Ground or Open
13	31S-AA64 (BK/GN) + 31S-AA64A (BK/GN)	Ground, switched
14	–	not used
15	32-AA34 (WH/GN)	Switched between: Battery voltage, Ground or Open
16	31S-AA63 (BK/OG) + 31S-AA63A (BK/OG)	Ground, switched