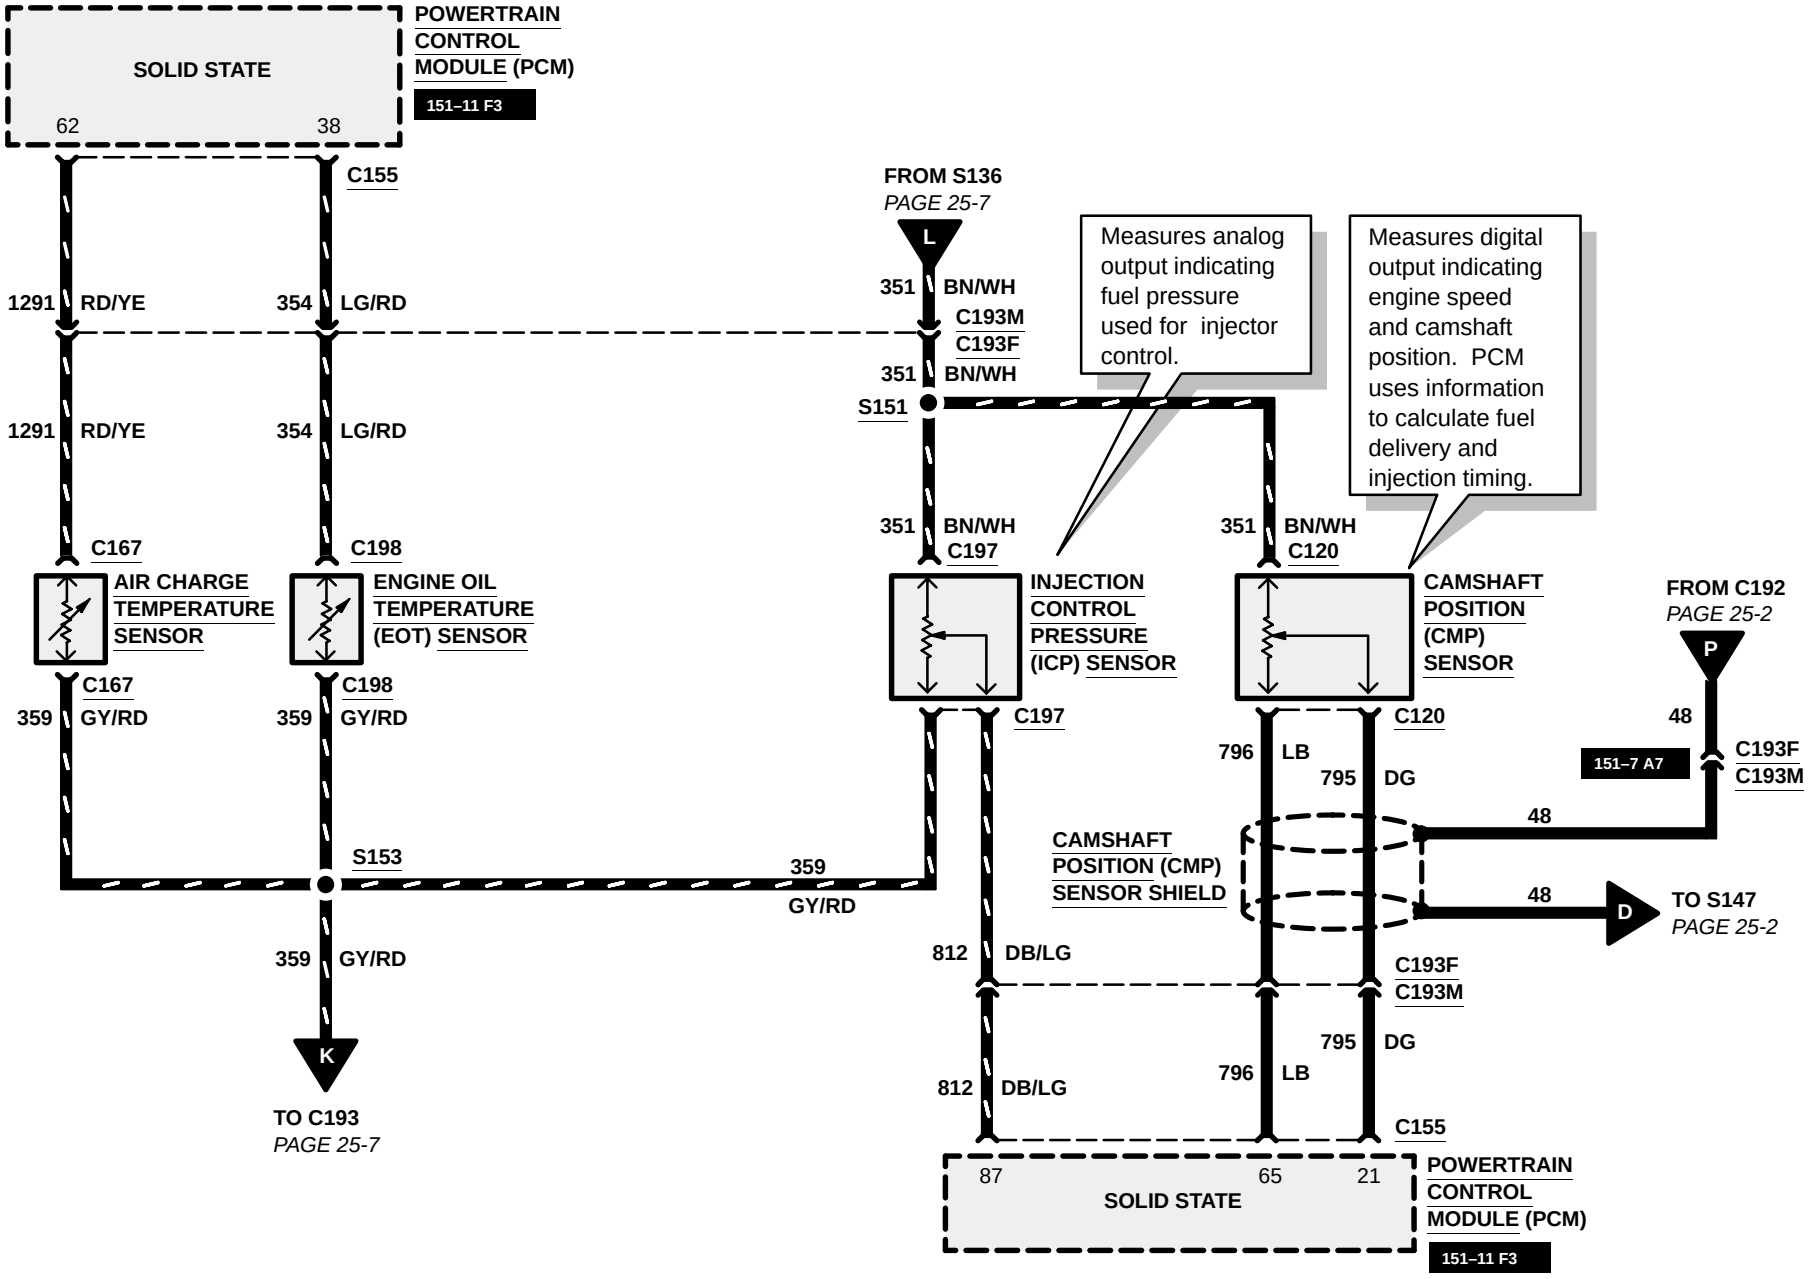
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 F3
62
38
C155
FROM S136
PAGE 25-7
L
351 BN/WH
C193M
C193F
351 BN/WH
S151
Measures analog output indicating fuel pressure used for injector control.
Measures digital output indicating engine speed and camshaft position. PCM uses information to calculate fuel delivery and injection timing.
1291 RD/YE
354 LG/RD
1291 RD/YE
354 LG/RD
351 BN/WH
C197
351 BN/WH
C120
C167
C198
AIR CHARGE TEMPERATURE SENSOR
ENGINE OIL TEMPERATURE (EOT) SENSOR
INJECTION CONTROL PRESSURE (ICP) SENSOR
CAMSHAFT POSITION (CMP) SENSOR
FROM C192
PAGE 25-2
P
C167
C198
359 GY/RD
359 GY/RD
C197
C120
48
796 LB
795 DG
151–7 A7
C193F
C193M
48
CAMSHAFT POSITION (CMP) SENSOR SHIELD
S153
359 GY/RD
48
D
TO S147
PAGE 25-2
359 GY/RD
812 DB/LG
C193F
C193M
795 DG
796 LB
812 DB/LG
K
TO C193
PAGE 25-7
C155
87
65
21
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 F3