C353 (BN)

14C719

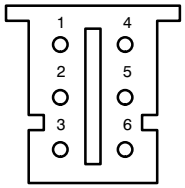

PIA

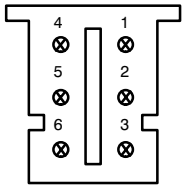

F06089

14C719	PIA
(1) (WH/YE)	(1) (YE/BK)
(2) (BN/BU)	(2) (WH/BU)
(3) (LG/WH)	(3) (YE/BU)
(4) (YE/BK)	(4) (WH/BK)
(5) (GY/OG)	(5) (YE/GN)
(6) (BN/LG)	(6) (WH/GN)

C354 (YE/WH)

14405

Seat belt tensioner, driver seat

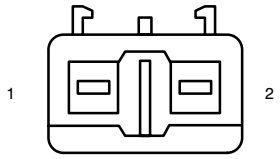

F02297

Pin	Circuit	Circuit function
1	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
2	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed

C359 (GY)

14C719

Heated seat module, driver side front

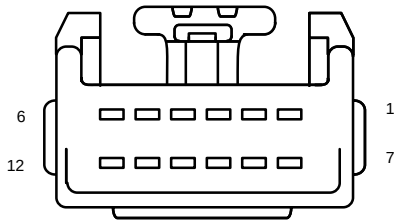

F12075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Temperature, return
4	1060 (BK/LB)	Temperature, signal
5	41 (BK/LB)	Voltage supplied in Start and Run (overload protected)
6	1064 (YE/LB)	heater, feed
7	1067 (VT/LB)	heater, return
8	–	not used
9	461 (OG)	indicator – On
10	–	not used
11	1020 (DG/VT)	Climate controlled seat module – On
12	1153 (RD)	Voltage supplied at all times (overload protected)

C362 (BK)

PIA

Driver seat horizontal motor

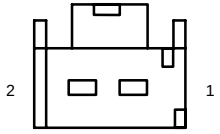

F02023

Pin	Circuit	Circuit function
1	(WH/BK)	Front seat forward/rearward motor + / –
2	(YE/BK)	Front seat forward/rearward motor + / –