C466 (GY)

14405

Subwoofer amplifier (18C804)

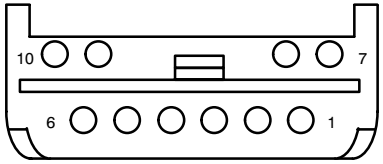

F10009

Pin	Circuit	Circuit function
1	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
2	57 (BK)	Ground
3	–	not used
4	–	not used
5	720 (RD/YE)	Voltage supplied at all times (overload protected)
6	–	not used
7	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
8	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
9	–	not used
10	–	not used

C474 (BK)

14405

Power point, rear (19G247)

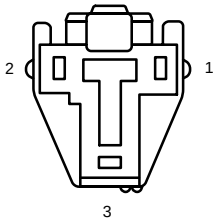

F03199

Pin	Circuit	Circuit function
1	212 (DB)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C475 (GY)

13B472

High mounted stop-lamp (13A613)

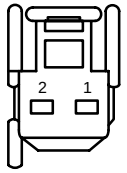

F02307

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	511 (LG)	Brake pedal position switch (13480), to stoplamps

C476 (GY)

18C673

Rear wiper motor assembly



F03072

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	406 (BN)	Voltage supplied in Start and Run (overload protected)
3	411 (LB)	Rear wiper relay, switched output

C478 (WH)

14A583

Liftgate glass ajar switch

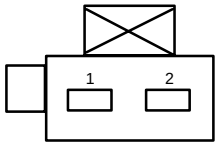

F02343

Pin	Circuit	Circuit function
1	701 (LB/BK)	Liftgate glass ajar switch
2	57 (BK)	Ground