C810

14K733

N1
Brake fluid level
switch (2L414)

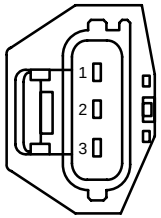

F03124

Pin	Circuit	Circuit function
1	31-GC7 (BK)	Ground
2	31S-GC6 (BK/YE)	Ground, Switched
3	31S-GE44 (BK/RD)	Ground, Switched

C811

14014

H5
Anti–theft horn

F01015

Pin	Circuit	Circuit function
1	49-GL26 (BU/YE)	Pulsed power feed (overload protected)

C812

14K733

N88
Low coolant level
switch

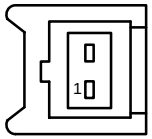

F02012

Pin	Circuit	Circuit function
1	31-GC9 (BK)	Ground
2	8-GC9 (WH/GN)	Sensor signal

C813 (WH)

14K733

N89
Low cleaning water
level switch

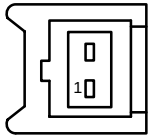

F02012

Pin	Circuit	Circuit function
1	31-GC8 (BK)	Ground
2	8-GC8 (WH/BU)	Sensor signal

C820 (WH)

14014

E57
Luggage compart-
ment lamp (13A756)



F02009

Pin	Circuit	Circuit function
1	29-LB25 (OG/BU)	Voltage supplied at all times (overload protected)
2	31S-LB26 (BK/OG)	Ground, Switched