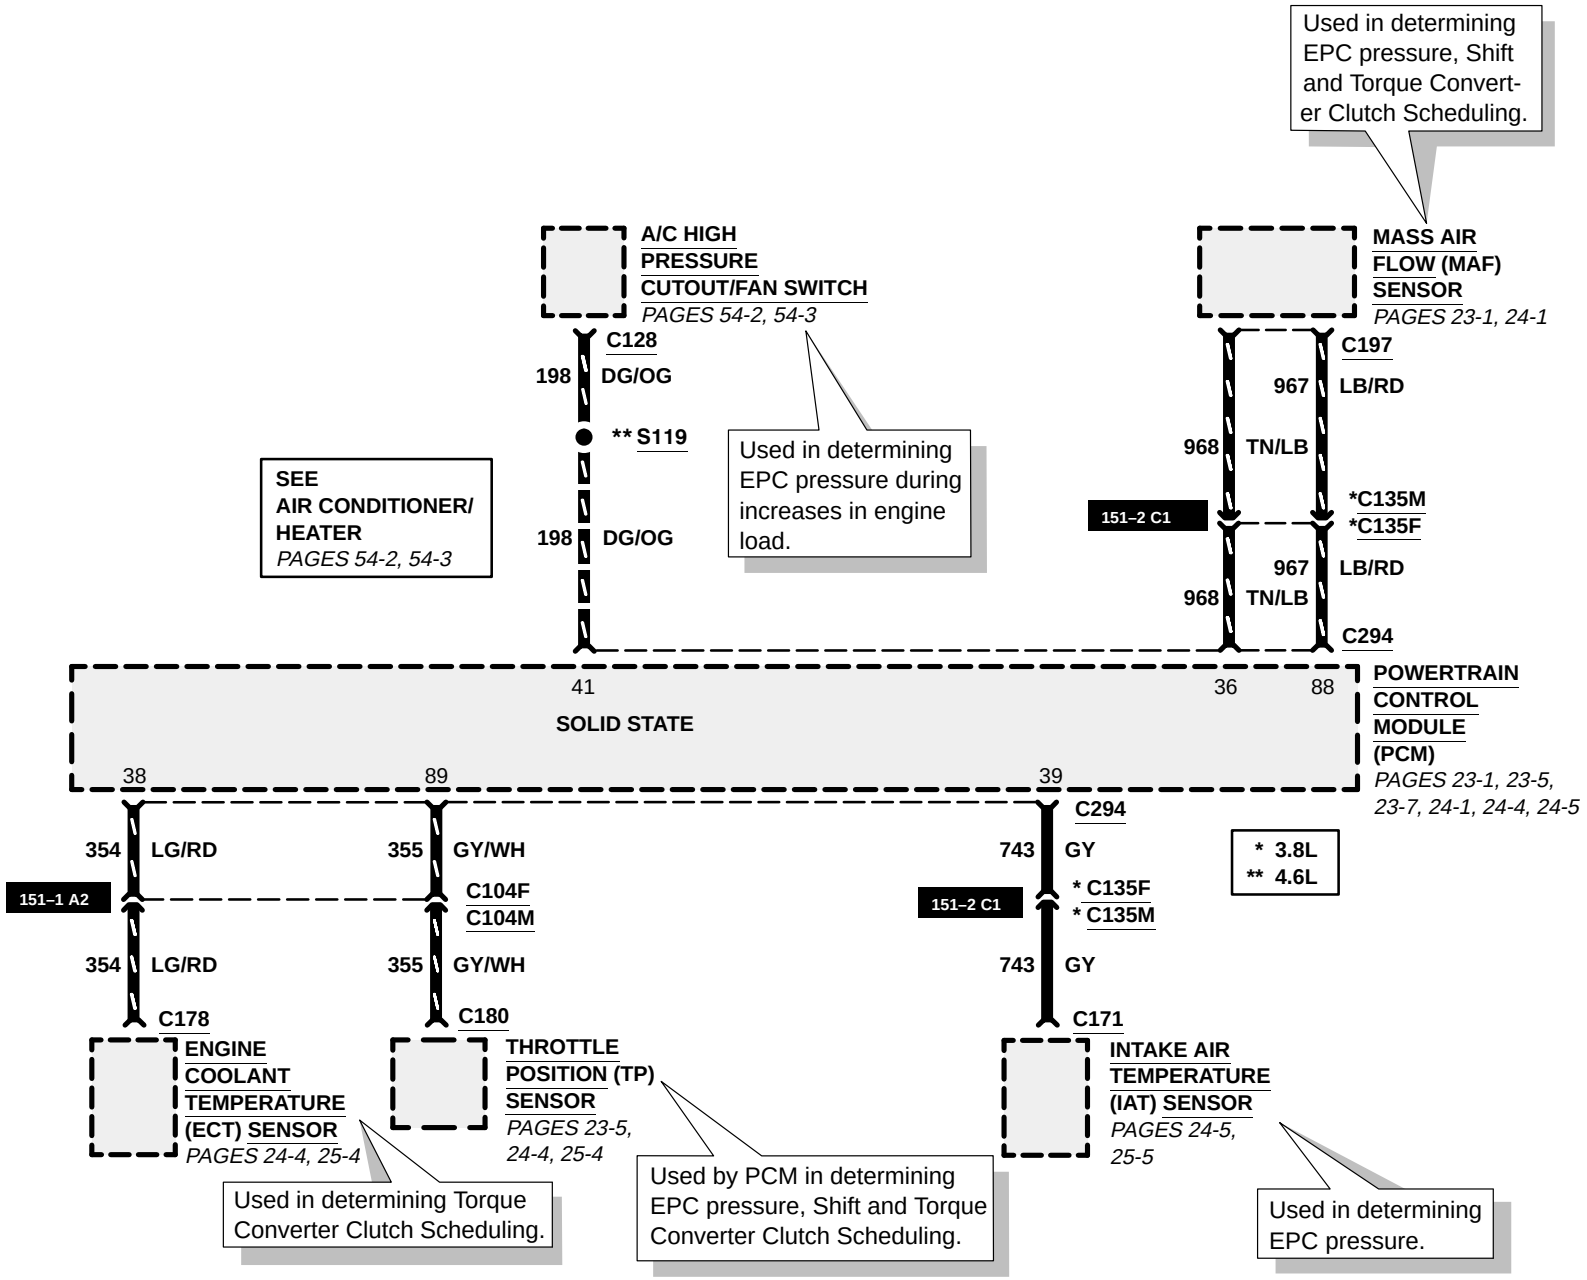
Used in determining EPC pressure, Shift and Torque Converter Clutch Scheduling.
A/C HIGH PRESSURE CUTOUT/FAN SWITCH
PAGES 54-2, 54-3
MASS AIR FLOW (MAF) SENSOR
PAGES 23-1, 24-1
C128
198 DG/OG
** S119
198 DG/OG
Used in determining EPC pressure during increases in engine load.
SEE AIR CONDITIONER/ HEATER
PAGES 54-2, 54-3
C197
967 LB/RD
968 TN/LB
151–2 C1
*C135M
*C135F
967 LB/RD
968 TN/LB
C294
41
36
88
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 23-5, 23-7, 24-1, 24-4, 24-5
38
89
39
354 LG/RD
355 GY/WH
C294
743 GY
* 3.8L
** 4.6L
151–1 A2
C104F
C104M
151–2 C1
* C135F
* C135M
354 LG/RD
355 GY/WH
743 GY
C178
C180
C171
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
PAGES 24-4, 25-4
THROTTLE POSITION (TP) SENSOR
PAGES 23-5, 24-4, 25-4
INTAKE AIR TEMPERATURE (IAT) SENSOR
PAGES 24-5, 25-5
Used in determining Torque Converter Clutch Scheduling.
Used by PCM in determining EPC pressure, Shift and Torque Converter Clutch Scheduling.
Used in determining EPC pressure.