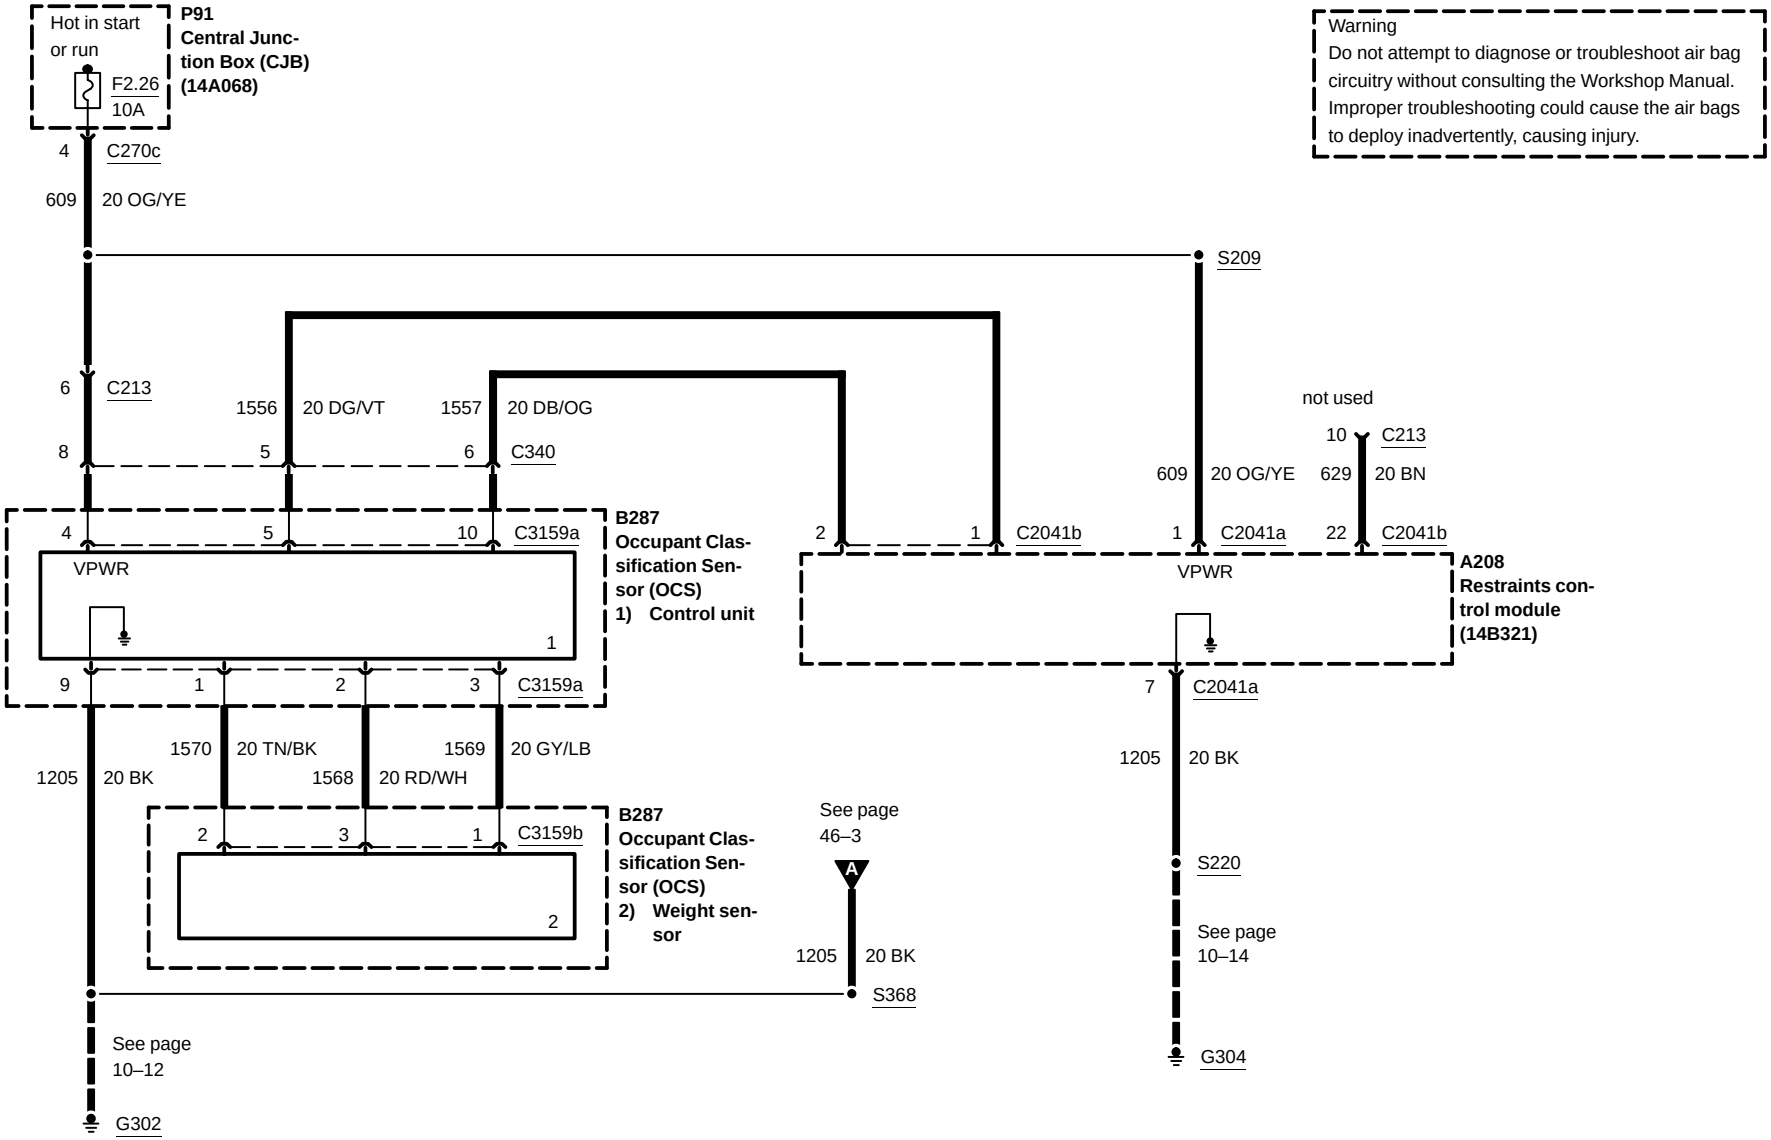
Hot in start
or run
F2.26
10A
P91
Central Junction Box (CJB)
(14A068)
4
C270c
609
20 OG/YE
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
S209
6
C213
8
1556
20 DG/VT
1557
20 DB/OG
5
6
C340
not used
10
C213
609
20 OG/YE
629
20 BN
4
5
10
C3159a
VPWR
1
B287
Occupant Classification Sensor (OCS)
1) Control unit
2
1
C2041b
1
C2041a
22
C2041b
VPWR
A208
Restraints control module
(14B321)
9
1
2
3
C3159a
7
C2041a
1570
20 TN/BK
1568
20 RD/WH
1569
20 GY/LB
1205
20 BK
1205
20 BK
2
3
1
C3159b
2
B287
Occupant Classification Sensor (OCS)
2) Weight sensor
See page
46–3
A
1205
20 BK
S368
S220
See page
10–14
G304
See page
10–12
G302