C466

14405

A14
Subwoofer amplifier

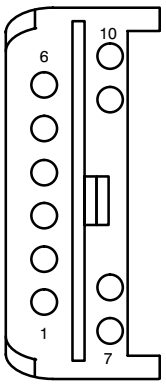

F10009

Pin	Circuit	Circuit Function
1	174 (GY/BK)	Radio - Subwoofer, Low, mute
2	57 (BK)	Ground
3	-	not used
4	-	not used
5	720 (RD/YE)	Voltage supplied at all times (overload protected)
6	-	not used
7	169 (LG/BK)	Radio - Subwoofer, Low, +
8	172 (LB/RD)	Radio - Subwoofer, Low, -
9	-	not used
10	-	not used

C474

14405

O21
Power point, rear

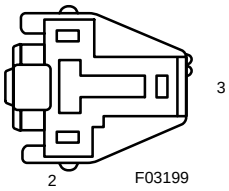

F03199

Pin	Circuit	Circuit Function
1	212 (DB)	Voltage supplied at all times (overload protected)
2	-	not used
3	57 (BK)	Ground

C475

13B472

E174
High mounted stoplamp

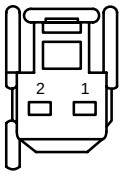

F02307

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	511 (LG)	Brake pedal position switch, to stoplamps

C476

18C673

M218
Rear wiper motor assembly



F03072

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	406 (BN/WH)	Voltage supplied in Start and Run (overload protected)
3	411 (BK/LB)	Rear wiper relay, switched output

C478

14A583

N258
Liftgate glass ajar switch

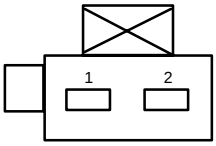

F02343

Pin	Circuit	Circuit Function
1	701 (LB/BK)	Liftgate glass ajar switch
2	57 (BK)	Ground

C479

14A583

N451
Liftgate ajar switch

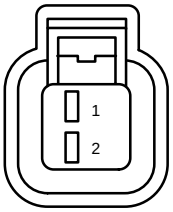

F02069

Pin	Circuit	Circuit Function
1	700 (WH/VT)	Liftgate ajar switch
2	57 (BK)	Ground