C3047

14A699

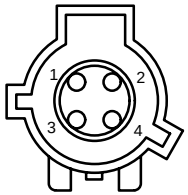

F04395

14B047

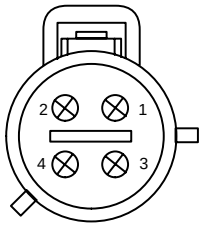

F04263

(1) 15-JA10B (GN/OG)
(2) 31-JA52 (BK/GN)
(3) 5-EC9 (BU)
(4) 4-EC9)GY)

C3063

14B079

Power point, console 1

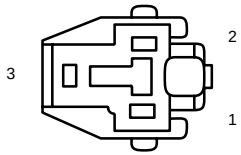

F03163

Pin	Circuit	Circuit function
1	30-HA29 (RD/GN)	Voltage supplied in Start and Run (overload protected)
2	–	not used
3	31-HA29 (BK)	Ground

C3064

14K005

Power point, console 1

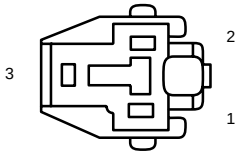

F03163

Pin	Circuit	Circuit function
1	30-HA28 (RD/OG)	Voltage supplied at all times (overload protected)
2	–	not used
3	31-HA28 (BK/OG)	Ground

C3065

14B719

Safety belt buckle switch, driver



F02433

Pin	Circuit	Circuit function
1	8-JA54 (WH)	Safety belt buckle switch, driver, switch sense
2	31-JA54 (BK/YE)	Ground

C3066

14A699

Safety belt buckle switch, passenger



F02433

Pin	Circuit	Circuit function
1	8-JA55 (WH/BK)	Safety belt buckle switch, passenger, switch sense
2	31-JA55 (BK/RD)	Ground