* 3.8L

C180

***9D930**
12B637

Camshaft position sensor (6B288)

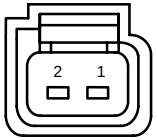

F02645

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	282 (DB/OG)	Camshaft position sensor (6B288), input

C181 (GY)

12B637

Fuel injector 1 (9F593)

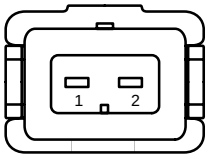

F02089

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	555 (TN)	Fuel injector 1, control

C182 (GY)

12B637

Fuel injector 2 (9F593)

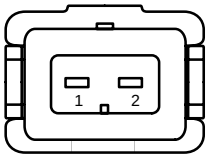

F02089

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	556 (WH)	Fuel injector 2, control

C183 (GY)

12B637

Fuel injector 3 (9F593)

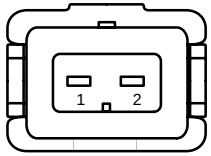

F02089

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	557 (BN/YE)	Fuel injector 3, control

C184 (GY)

12B637

Fuel injector 4 (9F593)

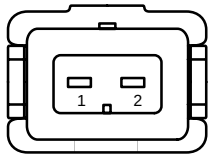

F02089

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	558 (BN/LB)	Fuel injector 4, control

C185 (GY)

12B637

Fuel injector 5 (9F593)

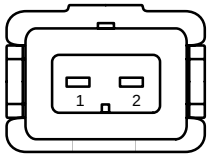

F02089

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	559 (TN/BK)	Fuel injector 5, control