-3

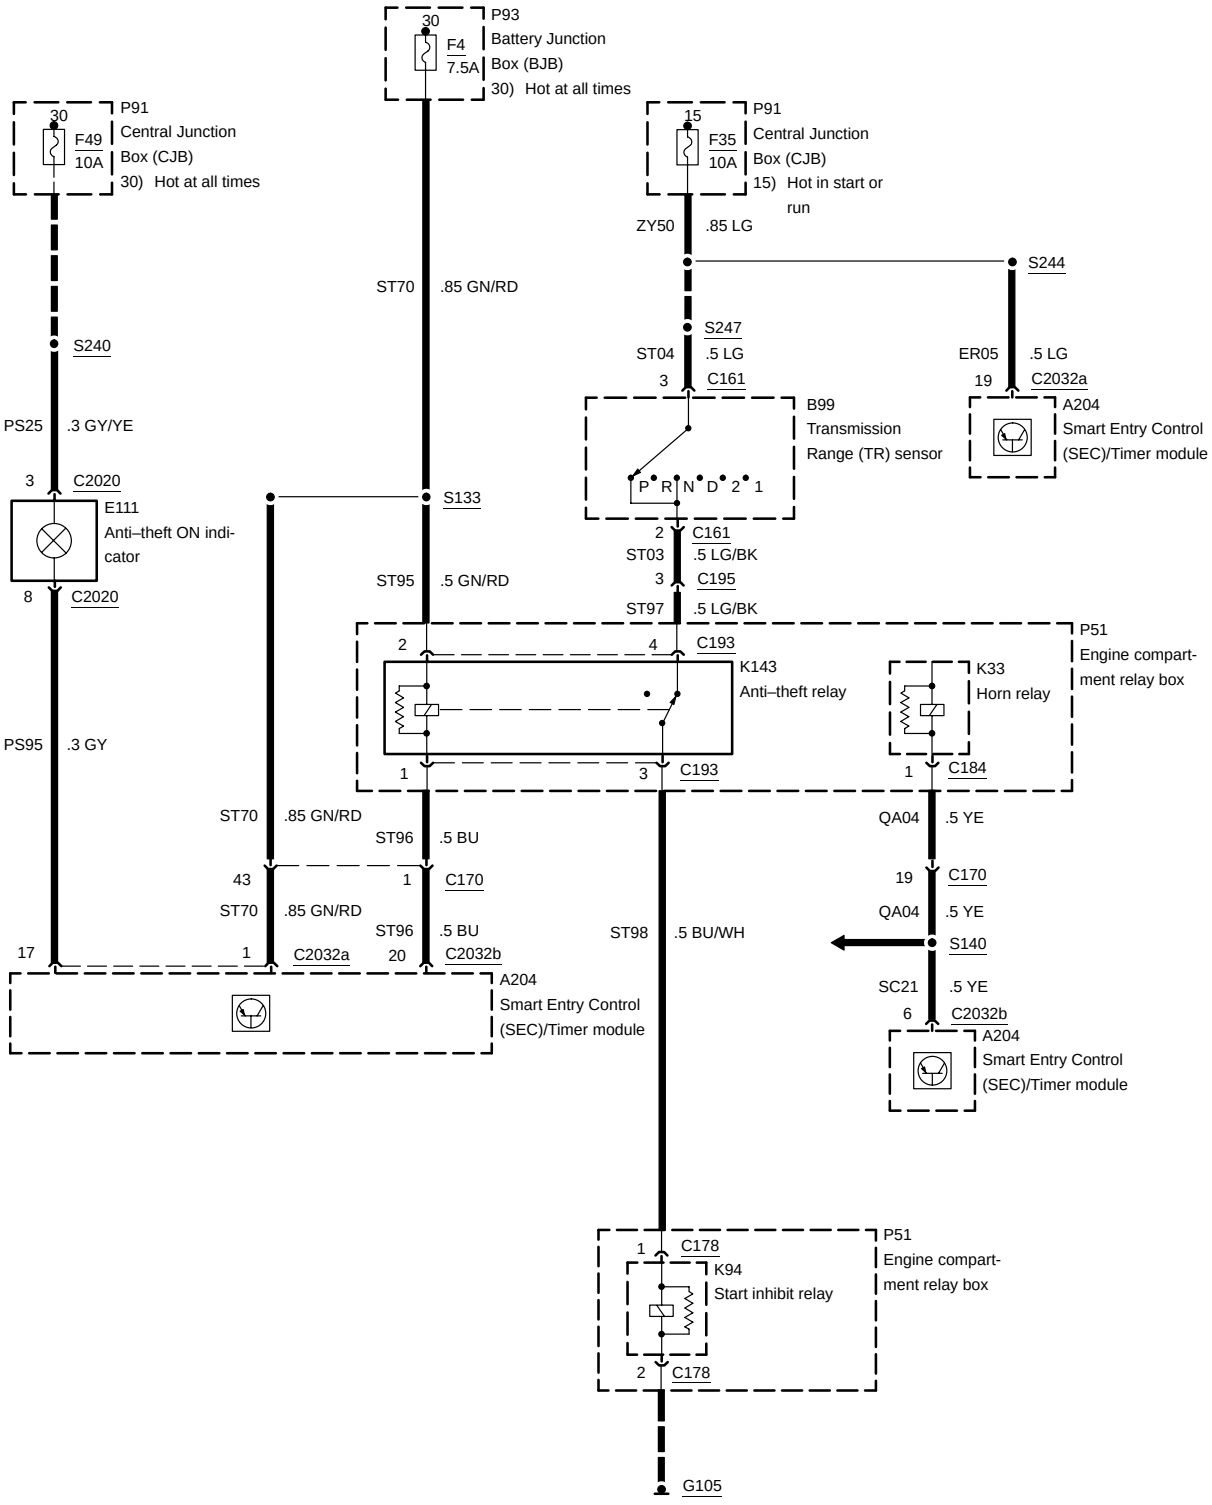
30
P93
Battery Junction
Box (BJB)
30) Hot at all times
F4
7.5A
30
P91
Central Junction
Box (CJB)
30) Hot at all times
F49
10A
15
P91
Central Junction
Box (CJB)
15) Hot in start or
run
F35
10A
ZY50 .85 LG
S244
ST70 .85 GN/RD
S247
ST04 .5 LG
3 C161
ER05 .5 LG
19 C2032a
A204
Smart Entry Control
(SEC)/Timer module
B99
Transmission
Range (TR) sensor
P R N D 2 1
S240
PS25 .3 GY/YE
3 C2020
E111
Anti–theft ON indi-
cator
8 C2020
S133
2 C161
ST03 .5 LG/BK
3 C195
ST95 .5 GN/RD
ST97 .5 LG/BK
P51
Engine compart-
ment relay box
2 4 C193
K143
Anti–theft relay
K33
Horn relay
1 3 C193
1 C184
PS95 .3 GY
ST70 .85 GN/RD
ST96 .5 BU
QA04 .5 YE
43 1 C170
19 C170
ST70 .85 GN/RD
ST96 .5 BU
ST98 .5 BU/WH
QA04 .5 YE
S140
17 1 C2032a 20 C2032b
A204
Smart Entry Control
(SEC)/Timer module
SC21 .5 YE
6 C2032b
A204
Smart Entry Control
(SEC)/Timer module
1 C178
K94
Start inhibit relay
2 C178
P51
Engine compart-
ment relay box
G105