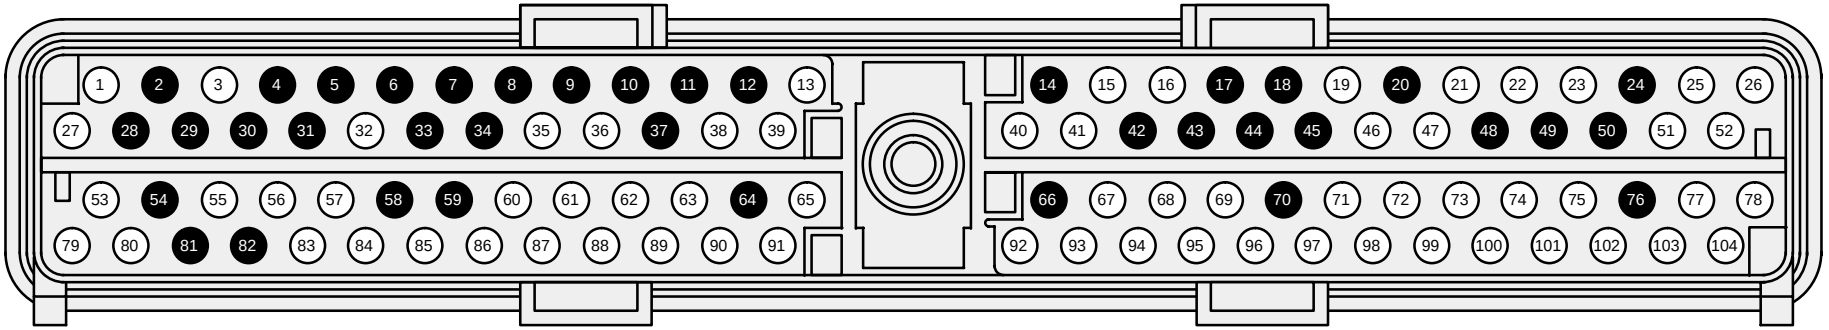

4.6L 4V

C294 (GRAY)

POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Integrated Coil on Plug Cylinder #6	18	–	NOT USED
2	–	NOT USED	19	228 (DB)	Cooling Fan (Low)
3	570 (BK/WH)	Ground	20	–	NOT USED
4	–	NOT USED	21	349 (DB)	Crankshaft Position (CKP) Sensor (+)
5	–	NOT USED	22	350 (GY)	Crankshaft Position (CKP) Sensor (–)
6	–	NOT USED	23	1274 (DG/WH)	Knock Sensor #2 (–)
7	–	NOT USED	24	–	NOT USED
8	–	NOT USED	25	1205 (BK)	Case Ground
9	–	NOT USED	26	1024 (LG/WH)	Integrated Coil on Plug Cylinder #1
10	–	NOT USED	27	1021 (LG/YE)	Integrated Coil on Plug Cylinder #5
11	–	NOT USED	28	–	NOT USED
12	–	NOT USED	29	–	NOT USED
13	107 (VT)	Data Link Connector (DLC) Reprogramming Power Supply Pin	30	–	NOT USED
			31	–	NOT USED
14	–	NOT USED	32	1273 (YE)	Knock Sensor #1 (–)
15	915 (PK/LB)	SCP Data Bus (–)	33	–	NOT USED
16	914 (TN/OG)	SCP Data Bus (+)	34	–	NOT USED
17	–	NOT USED			

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
35	392 (RD/LG)	Right Rear Heated Oxygen Sensor (HO2S)	71	361 (RD)	Vehicle Power (VPWR)
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return	72	561 (TN/RD)	Fuel Injector #7 Output
37	–	NOT USED	73	559 (TN/BK)	Fuel Injector #5 Output
38	354 (LG/RD)	Engine Coolant Temperature (ECT) Sensor Input	74	557 (BN/YE)	Fuel Injector #3 Output
39	743 (GY)	Intake Air Temperature (IAT) Sensor Input	75	555 (TN)	Fuel Injector #1 Output
40	928 (LB/OG)	Fuel Pump Monitor Input	76	–	NOT USED
41	198 (DG/OG)	Air Conditioning Cycling Switch (ACCS) Input	77	570 (BK/WH)	Power Ground (PWRGND)
42	–	NOT USED	78	1027 (PK/LB)	Integrated Coil on Plug Cylinder #7
43	–	NOT USED	79	1029 (WH/RD)	Integrated Coil on Plug Cylinder #8
44	–	NOT USED	80	922 (WH/RD)	Fuel Pump Output
45	–	NOT USED	81	–	NOT USED
46	639 (LG/VT)	Cooling Fan (High)	82	–	NOT USED
47	360 (BN/PK)	EGR Vacuum Regulator Solenoid	83	264 (WH/LB)	Idle Air Control (IAC) Valve
48	–	NOT USED	84	970 (DG/WH)	Output Shaft Speed (OSS) Sensor (+)
49	–	NOT USED	85	282 (DB/OG)	Camshaft Position (CMP) Sensor
50	–	NOT USED	86	439 (TN/LG)	A/C High Pressure Switch
51	570 (BK/WH)	Power Ground (PWRGND)	87	94 (RD/BK)	Left Front Heated Oxygen Sensor (HO2S)
52	1028 (WH/PK)	Integrated Coil on Plug Cylinder #3	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
53	1030 (DG/VT)	Integrated Coil on Plug Cylinder #4	89	355 (GY/WH)	Throttle Position (TP) Sensor
54	–	NOT USED	90	351 (BN/WH)	Voltage Reference (VREF)
55	729 (RD/WH)	Keep Alive Power	91	359 (GY/RD)	Signal Return (SIGRTN)
56	191 (LG/BK)	Vapor Management Valve	92	511 (LG)	Brake Pedal Position (BPP) Switch Input
57	310 (YE/RD)	Knock Sensor (+) Bank #1	93	387 (RD/WH)	Right Front Heated Oxygen Sensor Heater #11
58	–	NOT USED	94	388 (YE/LB)	Left Front Heated Oxygen Sensor Heater #21
59	–	NOT USED	95	389 (WH/BK)	Right Rear Heated Oxygen Sensor (HO2S) Heater #12
60	74 (GY/LB)	Right Front Heated Oxygen Sensor (HO2S)			
61	393 (VT/LG)	Left Rear Heated Oxygen Sensor (HO2S)	96	390 (TN/YE)	Left Rear Heated Oxygen Sensor (HO2S) Output Heater #22
62	791 (RD/PK)	Fuel Tank Pressure Transducer			
63	141 (RD/PK)	Fuel Rail Pressure Transducer	97	361 (RD)	Vehicle Power (VPWR)
64	–	NOT USED	98	562 (LB)	Fuel Injector #8 Output
65	352 (BN/LG)	Differential Pressure Feedback EGR Sensor	99	560 (LG/OG)	Fuel Injector #6 Output
66	–	NOT USED	100	558 (BN/LB)	Fuel Injector #4 Output
67	101 (GY/YE)	EVAP Canister Vent Solenoid	101	556 (WH)	Fuel Injector #2 Output
68	239 (WH/OG)	Vehicle Speed Sensor (VSS) Signal	102	311 (DG/VT)	Knock Sensor (+) Bank #2
69	331 (PK/YE)	WOT A/C Cutout Relay	103	570 (BK/WH)	Power Ground (PWRGND)
70	–	NOT USED	104	1026 (PK/WH)	Integrated Coil on Plug Cylinder #2