C905

14334

N435
Interior lamp switch, rear

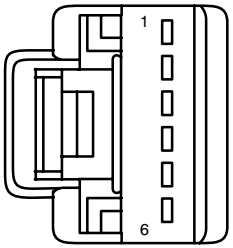

F006179

Pin	Circuit	Circuit function
1	31S-LB19 (BK/BU)	Ground, Switched
2	–	not used
3	–	not used
4	31-LB20 (BK)	Ground
5	–	not used
6	9-LB20 (BN/BU)	Sensor signal return (reference/ground)

C906

14334

E31
Vanity mirror lamp, right (04100)

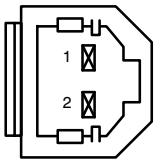

F02117

Pin	Circuit	Circuit function
1	31-LB23 (BK)	Ground
2	29S-LB23 (OG/WH)	Voltage supplied at all times (overload protected), Switched

C907

14334

E30
Vanity mirror lamp, left (04100)

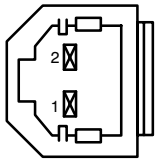

F02117

Pin	Circuit	Circuit function
1	31-LB16 (BK)	Ground
2	29S-LB16 (OG/GN)	Voltage supplied at all times (overload protected), Switched

C908a

14334

E113
Map reading lamp, left front (13466)

F01017

Pin	Circuit	Circuit function
1	29S-LB12 (OG/YE)	Voltage supplied at all times (overload protected), Switched

C908b

14334

E113
Map reading lamp, left front (13466)

F01017

Pin	Circuit	Circuit function
1	31S-LB12 (BK/YE)	Ground, Switched