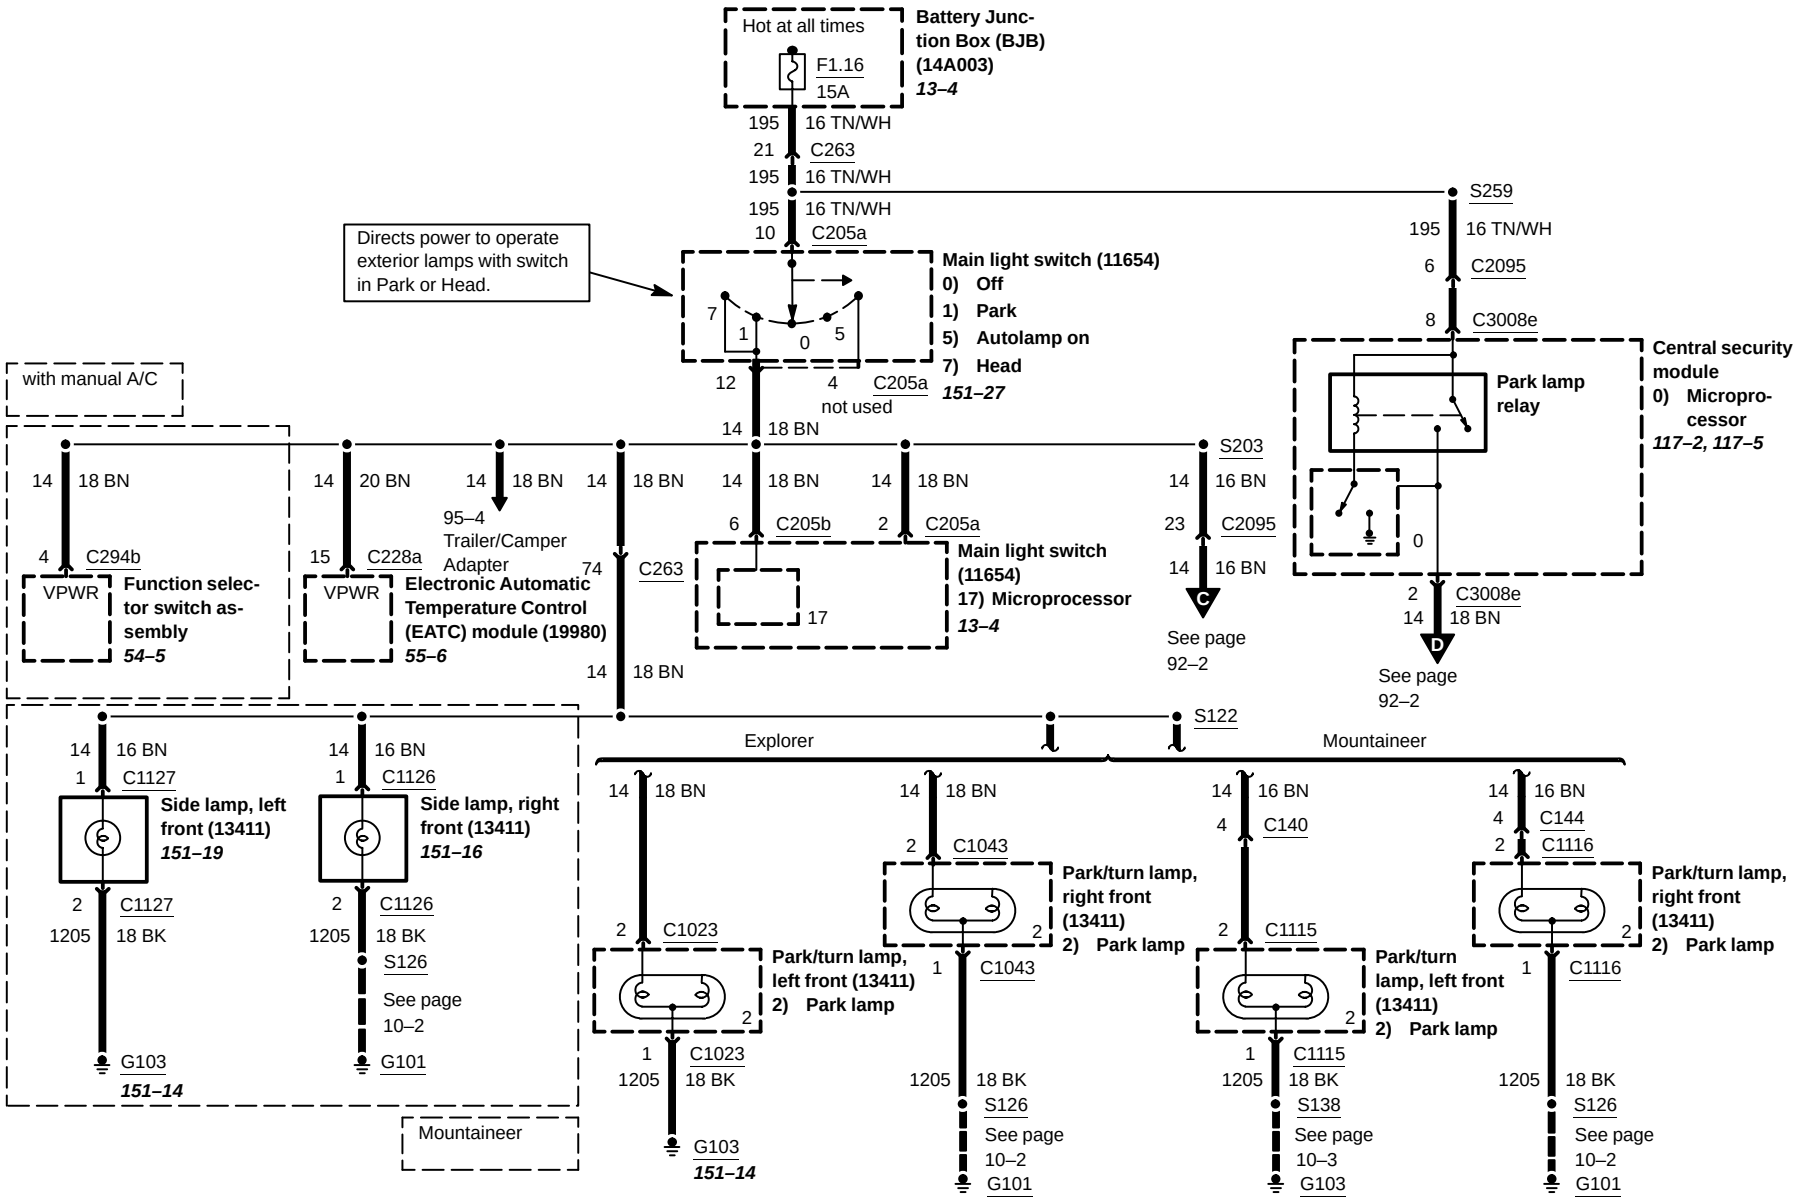
Hot at all times
Battery Junction Box (BJB) (14A003) 13–4
F1.16
15A
195 16 TN/WH
21 C263
195 16 TN/WH
195 16 TN/WH
10 C205a
Directs power to operate exterior lamps with switch in Park or Head.
Main light switch (11654)
0) Off
1) Park
5) Autolamp on
7) Head
151–27
12
4 C205a
not used
14 18 BN
S259
195 16 TN/WH
6 C2095
8 C3008e
Central security module
0) Microprocessor
117–2, 117–5
Park lamp relay
2 C3008e
14 18 BN
See page 92–2
with manual A/C
14 18 BN
4 C294b
VPWR
Function selector switch assembly 54–5
14 20 BN
15 C228a
VPWR
Electronic Automatic Temperature Control (EATC) module (19980) 55–6
14 18 BN
95–4 Trailer/Camper Adapter
14 18 BN
74 C263
14 18 BN
14 18 BN
6 C205b
17
Main light switch (11654)
17) Microprocessor
13–4
14 18 BN
2 C205a
S203
14 16 BN
23 C2095
14 16 BN
See page 92–2
14 18 BN
S122
Explorer
Mountaineer
14 16 BN
1 C1127
Side lamp, left front (13411) 151–19
2 C1127
1205 18 BK
G103
151–14
14 16 BN
1 C1126
Side lamp, right front (13411) 151–16
2 C1126
1205 18 BK
S126
See page 10–2
G101
Mountaineer
14 18 BN
2 C1023
Park/turn lamp, left front (13411)
2) Park lamp
1 C1023
1205 18 BK
G103
151–14
14 18 BN
2 C1043
Park/turn lamp, right front (13411)
2) Park lamp
1 C1043
1205 18 BK
S126
See page 10–2
G101
14 16 BN
4 C140
2 C1115
Park/turn lamp, left front (13411)
2) Park lamp
1 C1115
1205 18 BK
S138
See page 10–3
G103
14 16 BN
4 C144
2 C1116
Park/turn lamp, right front (13411)
2) Park lamp
1 C1116
1205 18 BK
S126
See page 10–2
G101