C2052

14A005

K329
Liftgate unlock relay

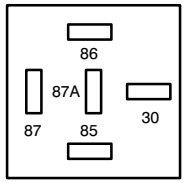

F05051

Pin	Circuit	Circuit function
87	1092 (PK/OG)	Voltage supplied at all times (overload protected)
87A	118 (PK/OG)	Door unlock, output
85	664 (YE/LG)	Liftgate unlock relay, control
86	1092 (PK/OG)	Voltage supplied at all times (overload protected)
	1092 (PK/OG)	Voltage supplied at all times (overload protected)
30	1016 (DB/YE)	Liftgate unlock relay, switched power

C2053

14A005

K330
Luggage compartment lid release relay

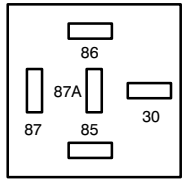

F05051

Pin	Circuit	Circuit function
87	202 (OG/LG)	Luggage compartment lid release relay, switched power
87A	–	not used
85	664 (YE/LG)	Luggage compartment lid release relay, Ground
86	84 (VT/YE)	Voltage supplied at all times (overload protected)
30	84 (VT/YE)	Voltage supplied at all times (overload protected)
	84 (VT/YE)	Voltage supplied at all times (overload protected)

C3171

19A442

P77
In–line fuse



F02213

Pin	Circuit	Circuit function
1	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
2	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)