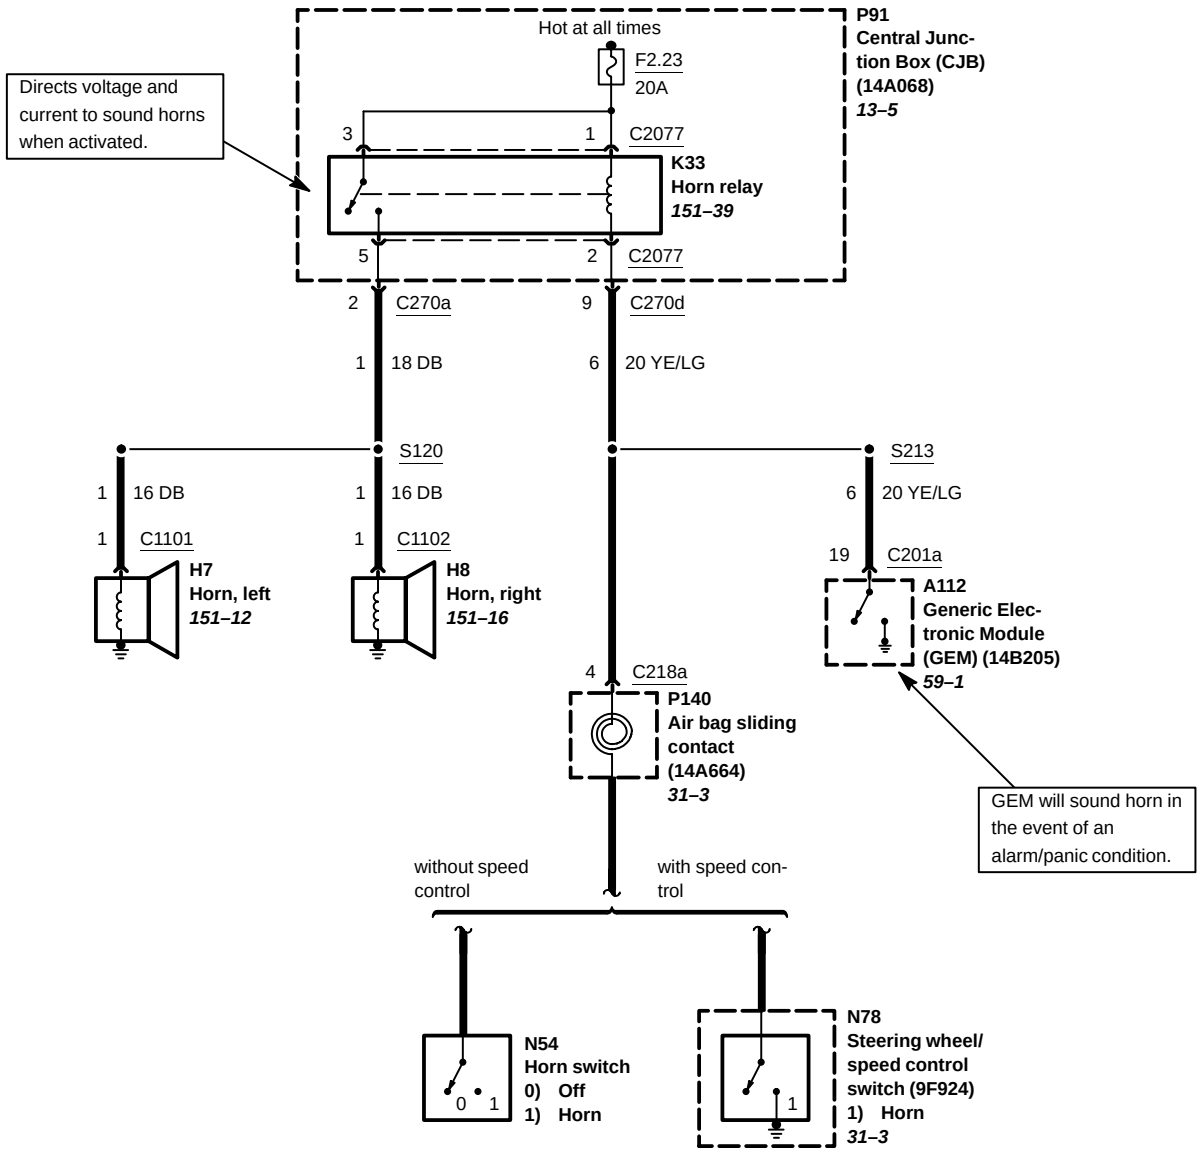
Directs voltage and current to sound horns when activated.
Hot at all times
F2.23
20A
P91
Central Junction Box (CJB)
(14A068)
13–5
3
1
C2077
K33
Horn relay
151–39
5
2
C2077
2
C270a
9
C270d
1
18 DB
6
20 YE/LG
S120
S213
1
16 DB
1
16 DB
6
20 YE/LG
1
C1101
1
C1102
19
C201a
H7
Horn, left
151–12
H8
Horn, right
151–16
A112
Generic Electronic Module (GEM) (14B205)
59–1
4
C218a
P140
Air bag sliding contact
(14A664)
31–3
GEM will sound horn in the event of an alarm/panic condition.
without speed control
with speed control
N54
Horn switch
0) Off
1) Horn
0
1
N78
Steering wheel/ speed control switch (9F924)
1) Horn
31–3
1